


# AG-V3050

## Audio/Video Surround Receiver

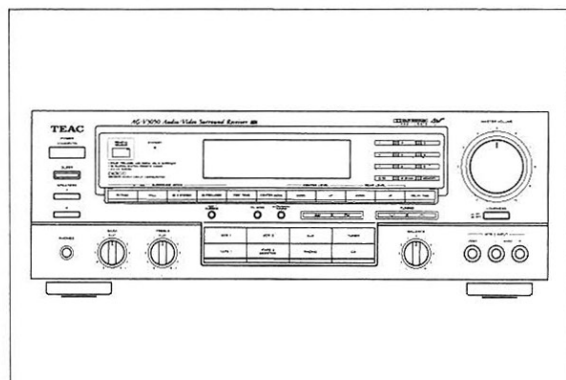

OWNER'S MANUAL .....	2
MANUEL DU PROPRIETAIRE .....	30

Thanks for buying a TEAC. Read this manual carefully to get the best performance from this unit.

Nous vous remercions pour l'achat d'un appareil TEAC.

Lire ce manuel avec attention pour obtenir les meilleures performances possibles de cet appareil.



### CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This appliance has a serial number located on the rear panel. Please record the model number and serial number and retain them for your records.

Model number \_\_\_\_\_  
Serial number \_\_\_\_\_

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

# IMPORTANT SAFETY INSTRUCTIONS

## CAUTION:

- Read all of these instructions.
- Save these instructions for later use.
- Follow all warnings and instructions marked on the audio equipment.

- 1) **Read instructions** — All the safety and operating instructions should be read before the product is operated.
- 2) **Retain instructions** — The safety and operating instructions should be retained for future reference.
- 3) **Heed Warnings** — All warnings on the product and in the operating instructions should be adhered to.
- 4) **Follow instructions** — All operating and use instructions should be followed.
- 5) **Cleaning** — Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 6) **Attachments** — Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 7) **Water and Moisture** — Do not use this product near water — for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
- 8) **Accessories** — Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- 9) A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.




- 10) **Ventilation** — Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 11) **Power Sources** — This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- 12) **Grounding or Polarization** — This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 13) **Power-Cord Protection** — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
- 14) **Outdoor Antenna Grounding** — If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

### Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Section 820-40 of the NEC which provides guidelines for proper

grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical."

Example of antenna grounding as per National Electrical Code, ANSI/NFPA 70

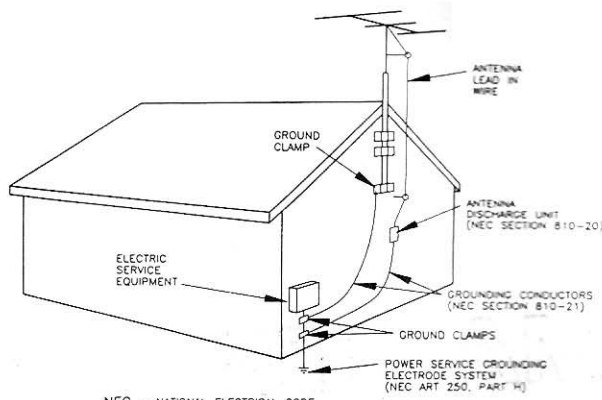

NEC — NATIONAL ELECTRICAL CODE

- 15) **Lightning** — For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- 16) **Power Lines** — An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 17) **Overloading** — Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 18) **Object and Liquid Entry** — Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 19) **Servicing** — Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 20) **Damage Requiring Service** — Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a) When the power-supply cord or plug is damaged.
  - b) If liquid has been spilled, or objects have fallen into the product.
  - c) If the product has been exposed to rain or water.
  - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - e) If the product has been dropped or damaged in any way.
  - f) when the product exhibits a distinct change in performance — this indicates a need for service.
- 21) **Replacement Parts** — When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 22) **Safety Check** — Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 23) **Wall or Ceiling Mounting** — The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 24) **Heat** — The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

# PRECAUTIONS

## Placement of the Unit

As the unit incorporates a powerful amplifier, heat is radiated from the back and top of the unit; the location where the unit is installed should be well ventilated. Avoid installing where it would be exposed to high temperatures, direct sunlight, high humidity and dust. If the wiring is too long, particularly the speaker cables, it may result in degraded sound. Keep the connection cables as short as possible.

The receiver draws nominal non-operating power from the AC outlet with its POWER switch in the STANDBY position.

Obs! nätströmställaren skiljer ej hela apparaten från nätet.

THE APPLIANCE CONFORMS WITH EEC DIRECTIVE 87/308/EEC REGARDING INTERFERENCE SUPPRESSION.

CONFORME AL D.M. 13 APRILE 1989 DIRETTIVA CEE/87/308.

## For General Export Models


### VOLTAGE CONVERSION

Be sure to remove the power cord from the AC outlet before repositioning the voltage converter switches.

1. Locate the voltage selectors on the rear panel.
2. Using a flat-bladed screwdriver, set to the appropriate 115 V or 230 V position according to your area.

### CAUTION:

Both switches must be in the same switch setting.

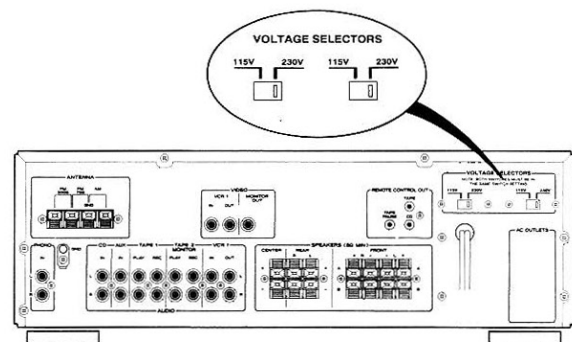

## For U.S.A.

### TO THE USER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against interference in a residential area. This device generates and uses radio frequency energy and if not installed and used in accordance with the instructions, it may cause interference to radio or TV reception. If this unit does cause interference with TV or radio reception you can try to correct the interference by one or more of the following measures:

- a) Reorient or relocate the receiving antenna.
- b) Increase the separation between the equipment and the receiver.
- c) Plug the equipment into a different outlet so that it is not on the same circuit as the receiver.

If necessary, consult the dealer or an experienced radio/TV technician for additional suggestions.

### CAUTION

Changes or modifications to this equipment not expressly approved by TEAC CORPORATION for compliance could void the user's authority to operate this equipment.

## FOR U.S.A.

### Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## For CANADA

### AC POWER CORD CONNECTION

#### CAUTION:

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

## For CANADA

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS AS SET OUT IN THE RADIO INTERFERENCE REGULATIONS OF THE CANADIAN DEPARTMENT OF COMMUNICATIONS.

# CONTENTS


<b>IMPORTANT SAFETY INSTRUCTIONS</b> .....	<b>2</b>
<b>PRECAUTIONS</b> .....	<b>3</b>
<b>CONNECTIONS</b> .....	<b>5</b>
System Connections .....	5
VCR 2 INPUT Jacks .....	6
Antenna Connections.....	6
FM Antenna (U.S.A./Canada/General Export) .....	6
FM Antenna (Europe).....	7
AM Antenna .....	8
Speaker Connections.....	9
<b>CONTROLS AND INDICATORS</b> .....	<b>10</b>
<b>REMOTE CONTROL UNIT</b> .....	<b>11</b>
Batteries .....	11
Battery Installation .....	11
Battery Replacement Period .....	12
Precautions Concerning Batteries.....	12
Using the Remote Control Unit.....	12
Cautions on Use of the Remote Control Unit.....	12
<b>AUDIO OPERATIONS</b> .....	<b>13</b>
Basic Operations .....	13
Audio Adjustments.....	14
Radio Reception .....	14
Auto Tuning .....	14
Manual Tuning.....	15
Preset Tuning.....	15
Listening to Records and Compact Discs.....	16
Playing Tapes.....	16
Recording Tapes.....	17
Recording a Source other than Tape.....	17
Tape Dubbing (from Tape Deck 1 to Tape Deck 2) .....	17
<b>VIDEO OPERATIONS</b> .....	<b>18</b>
Playing Video Sources.....	18
Recording with a Video Deck.....	18
Tape Dubbing (from VCR 2 to VCR 1) .....	18
S.A.V.E. (Second Audio Source for Video Editing) SYSTEM Function .....	19
A/V Background Recording Function .....	19
<b>SURROUND EFFECTS</b> .....	<b>20</b>
Available Surround Modes.....	20
DOLBY PRO LOGIC Surround.....	20
DOLBY 3 STEREO Surround .....	20
HALL Surround.....	20
Selecting the Surround Effect.....	20
Speaker Installation.....	21
DOLBY PRO LOGIC and DOLBY 3 STEREO Surround Modes .....	21
HALL Mode.....	21
Delay Time .....	22
Playing Surround Sound.....	22
DOLBY PRO LOGIC Surround.....	22
DOLBY 3 STEREO Surround .....	22
HALL Surround .....	23
<b>MEMORY BACKUP FUNCTION</b> .....	<b>23</b>
<b>TEAC SYSTEM REMOTE-CONTROLLED OPERATION</b> .....	<b>24</b>
Using a CD Player and a Cassette Deck with a REMOTE SENSOR Window .....	24
Using a Cassette Deck without a REMOTE SENSOR Window.....	25
Buttons for the Operation of Other TEAC Components.....	26
<b>TROUBLESHOOTING</b> .....	<b>27</b>
<b>SPECIFICATIONS</b> .....	<b>29</b>




# CONNECTIONS

- Do not plug the power cord of any component into AC outlets and do not turn their POWER switches on until all connections have been performed.

## System Connections

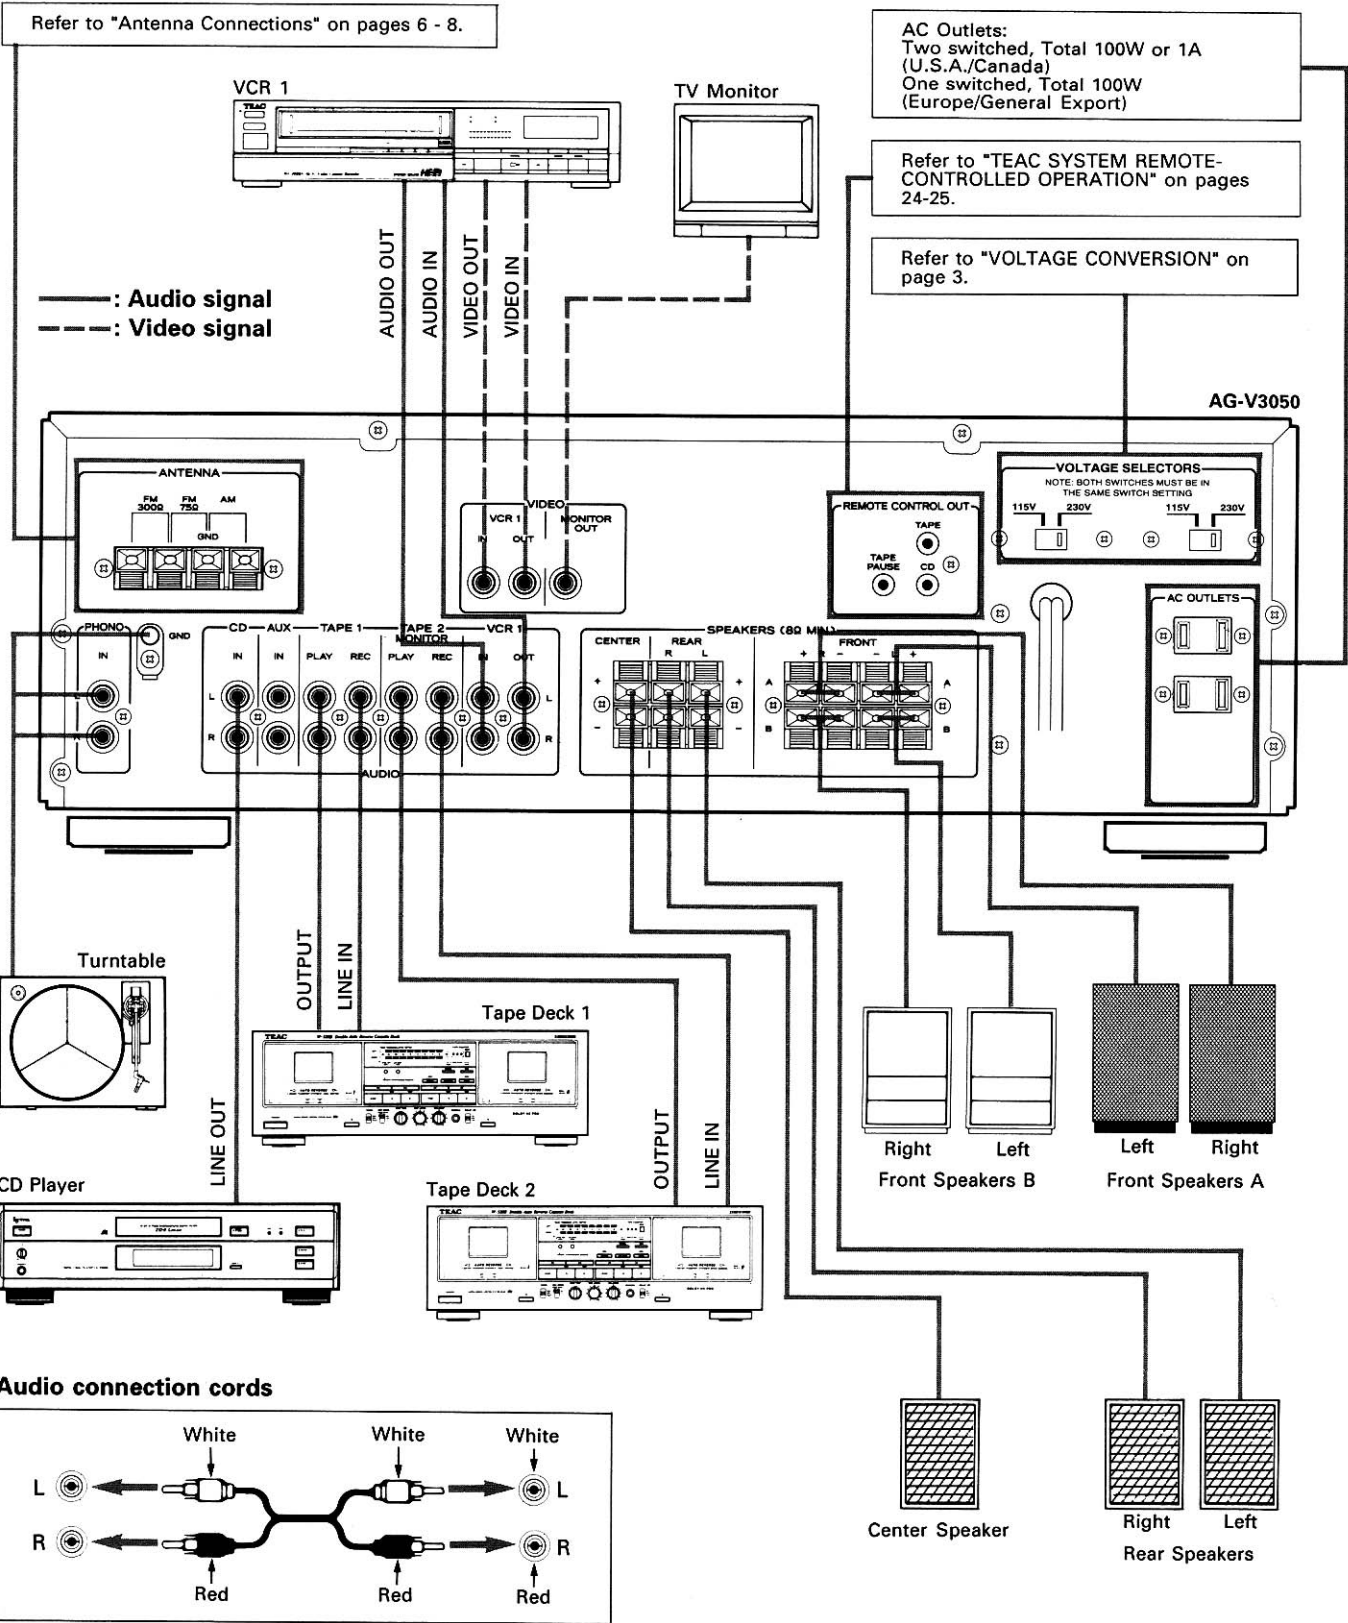


## VCR 2 INPUT Jacks

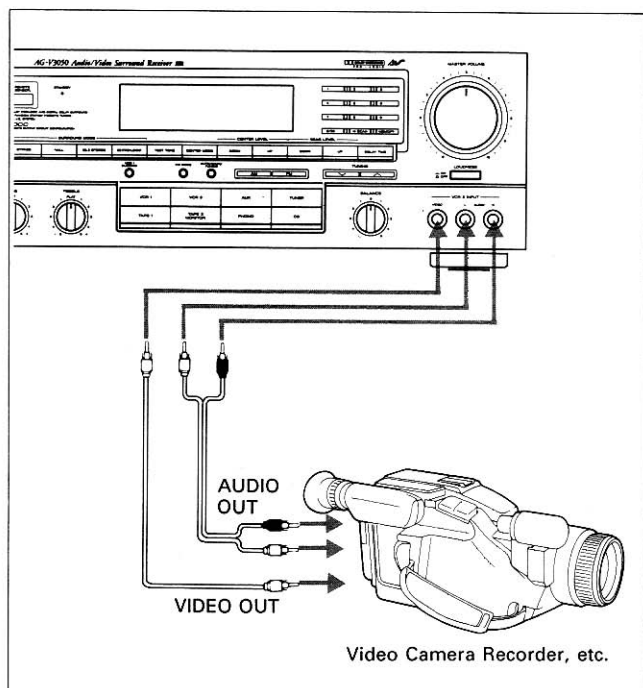


## Antenna Connections

### FM Antenna (U.S.A./Canada/General Export)

In an area with strong FM signals, the "T"-type FM antenna provided is sufficient. Extend this into a "T" shape and connect the two wires at the base of the T to the antenna terminals, as shown. For details of how to connect the antenna wires to the terminals, see the illustration. Extend the top of the T and fix with thumb tacks, or the like, to a wall or window frame for the best possible reception.

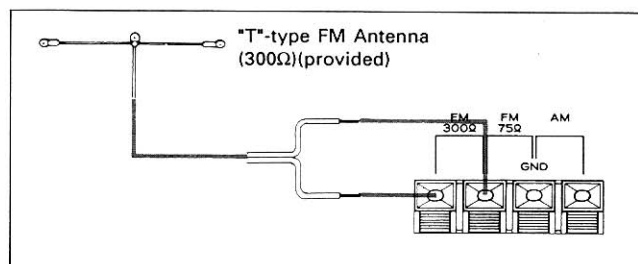


### How to connect antenna

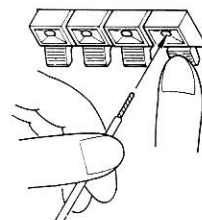

Press the lever down and insert the stripped end of the wire into the correct hole. Then release the lever so that the wire is held securely.

In an area where FM signals are weak, it will be necessary to use a 75-ohm unbalanced-type outdoor FM antenna. Generally, a 3-element antenna will be sufficient; if you live in an area where the FM signals are particularly weak, it may be necessary to use one with 5 or more elements.


75-ohm antennas use a coaxial cable and should be connected as follows: first strip the covering of the cable, then twist the wire shielding so the inner core and shielding can be connected as shown.

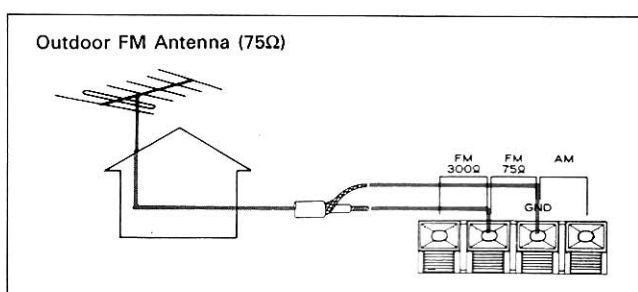


## FM Antenna (Europe)

Models for Europe are designed for the connection of a 75-ohm unbalanced type outdoor FM antenna using the provided matching transformer, as shown. Generally, a 3-element antenna will be sufficient; if you live in an area where the FM signals are particularly weak, it may be necessary to use one with 5 or more elements.

Connect the coaxial cable of the antenna to the matching transformer as shown. After completing connection, plug the transformer into the "FM 75Ω" socket. Plug the top of the T and fix it to a window frame or wall with thumb tacks, or the like, where reception is best.


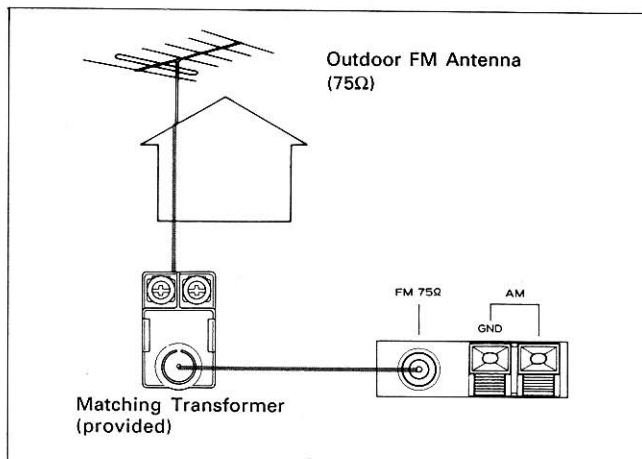


If you live reasonably close to a transmitter and want to use the provided "T"-type FM antenna, you will have to connect it to the provided matching transformer. Connect the wires at the base of the T to the terminals of the matching transformer as shown. Plug the transformer into the "FM 75Ω" socket, extend the top of the T and fix it to a window frame or wall with thumb tacks, or the like, where reception is best.

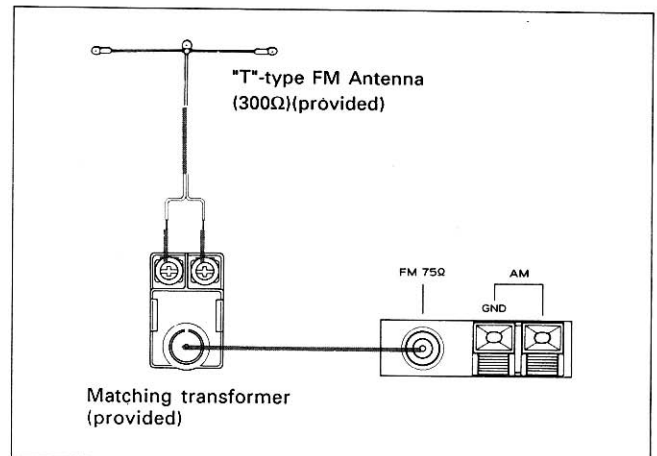


### How to connect a coaxial cable to the matching transformer



- ① Strip the cable as shown below.



- ② Remove the cover by pulling the side-pieces out with your finger nail.

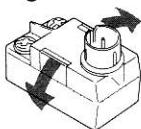

- ③ Insert the core wire into the slit in the metal tab as shown in (A). Crimp the metal claws with pliers, etc. so they hold the shielding mesh portion. Replace the cover.

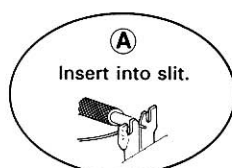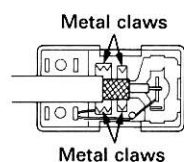


## AM Antenna

### ■ AM Loop Antenna

A high-performance AM loop antenna is provided with the receiver and this is sufficient for good reception in most areas.


Connect the loop antenna's wires to the AM antenna terminals as shown. For details of connecting antenna wires to the terminals, see "How to connect antenna" on page 6.

Place the antenna on a shelf, for example, or hang it on a window frame, etc., in the direction which gives the best reception and as far away as possible from the entire system, speaker cords and the power cord, to prevent unwanted noise.

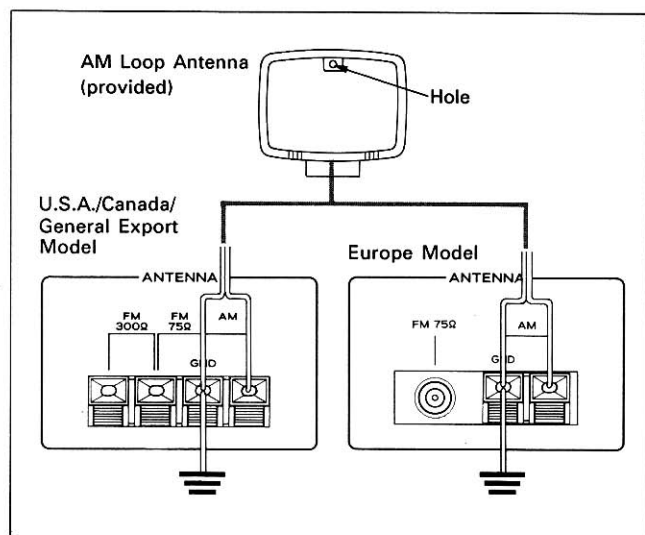


### Setting up AM Loop Antenna

#### On a shelf, etc.

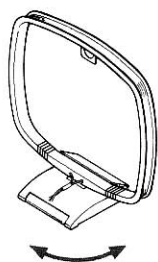

Find the direction in which reception is best.

#### On a window frame, etc.

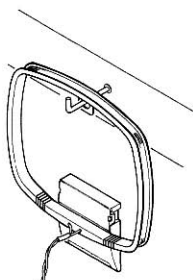


Hang in the direction which gives the best reception.

### ■ AM Outdoor Antenna

If the AM loop antenna provided does not deliver sufficient reception (because you are too far from the transmitter or in a concrete building, etc.), it may be necessary to use an outdoor AM antenna. Use an insulated wire more than 15 ft (5 m) long, strip one end, and connect this to the terminal as shown. The antenna wire should be strung outdoors or indoors near a window. For better reception, connect the GND terminal to a reliable ground.

**Note:** Even when using an outdoor AM antenna, do not disconnect the AM loop antenna.

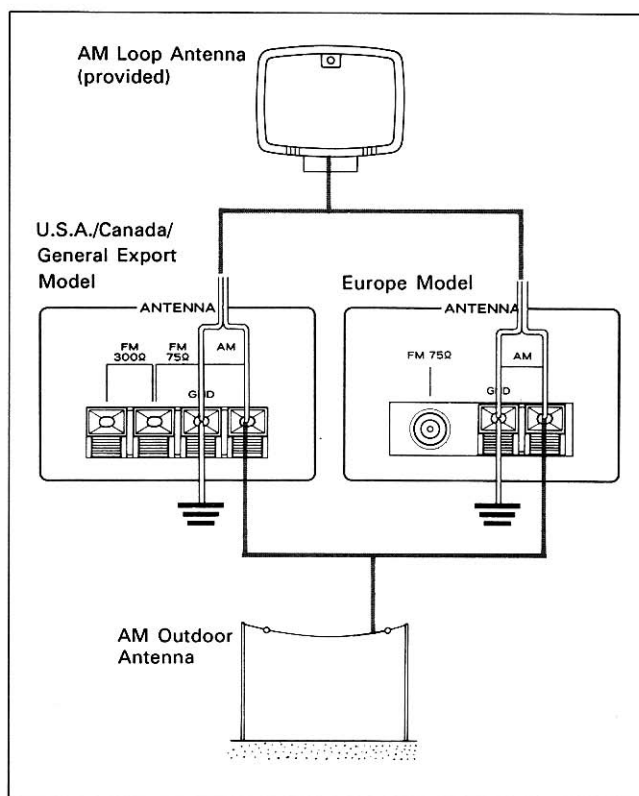



## Speaker Connections

### Caution:


To avoid damaging the speakers by inputting a sudden high-level signal, be sure to switch the power off before connecting the speakers.

Connect each speaker to the corresponding speaker terminals, as desired. For "Speaker Installation", refer to page 21.

### Notes:

- When using the rear speakers, be sure to connect them to both channels (L and R). If a speaker is connected to only one channel, no sound will be heard.
- Use speakers with a nominal impedance of 8 ohms or more.


Connect the speaker cords to the speaker terminals as shown in the following illustration.

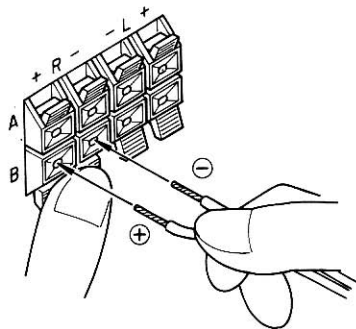



Press the lever, insert the stripped end of the cord, then release the lever so that the cord is held securely.

# CONTROLS AND INDICATORS

## ■ Front Panel

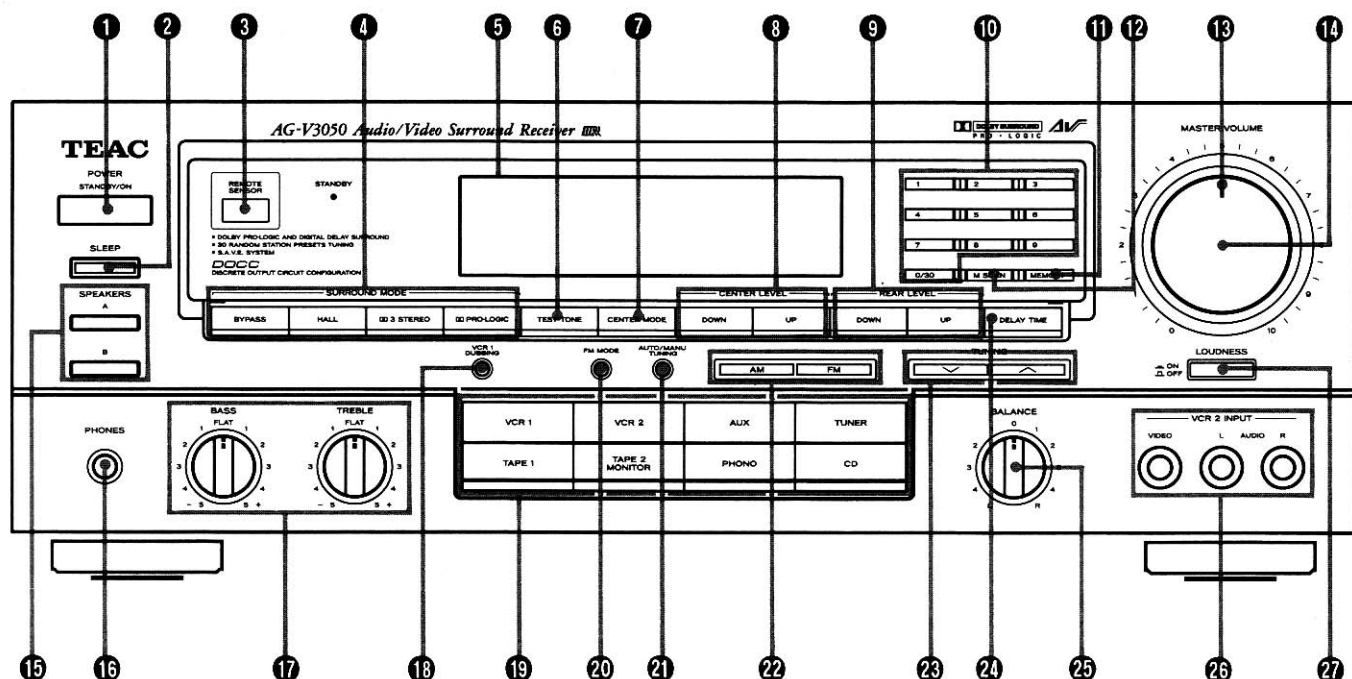

## ■ Remote Control Unit (UR-405)

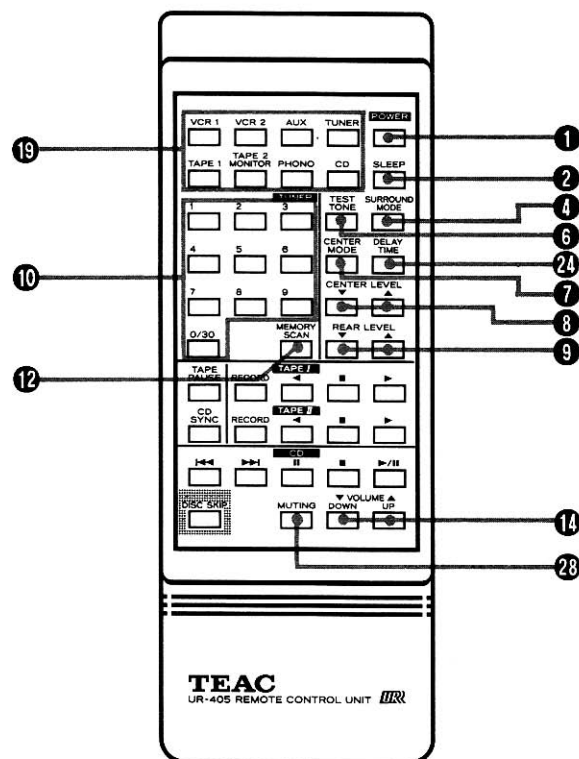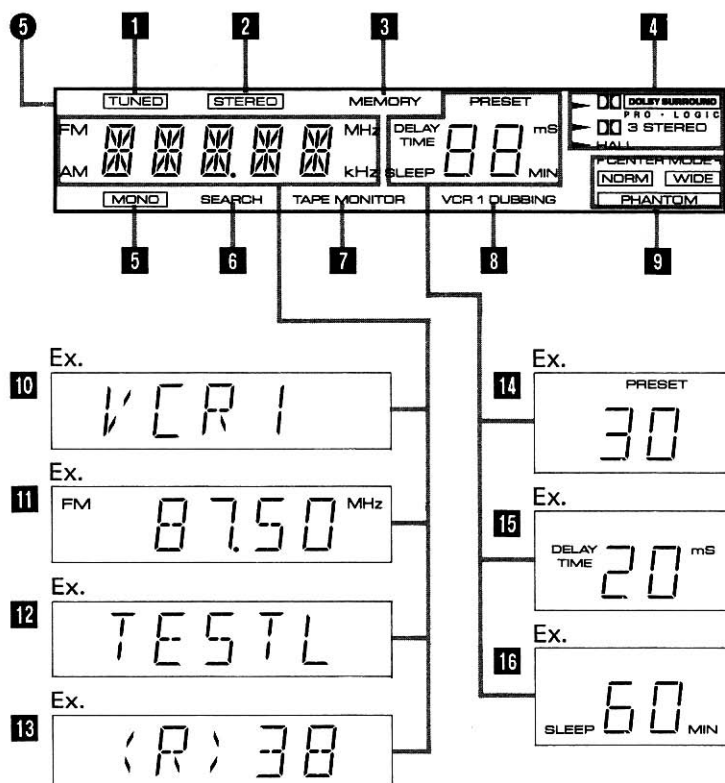

\* For remote-control-unit buttons which are not numbered, refer to page 26.

# REMOTE CONTROL UNIT

- ❶ POWER Button
- ❷ SLEEP Button
- ❸ REMOTE SENSOR Infrared Signal Reception Window
- ❹ SURROUND MODE Button(s)
- ❺ Multi-Function Display Window
- ❻ TEST TONE Button
- ❼ CENTER MODE Button
- ❽ CENTER LEVEL DOWN/UP Buttons
- ❾ REAR LEVEL DOWN/UP Buttons
- ❿ Numeric Keys
- ⓫ MEMORY Button
- ⓫ M SCAN Button (MEMORY SCAN Button)
- ⓫ MASTER VOLUME Level Indicator
- ⓫ VOLUME Control (VOLUME DOWN/UP Buttons)
- ⓫ SPEAKERS Select Buttons
- ⓫ PHONES Jack
- ⓫ BASS and TREBLE Controls
- ⓫ VCR 1 DUBBING Button
- ⓫ Source Selector Buttons
- ⓫ FM MODE Button
- ⓫ AUTO/MANU TUNING Button
- ⓫ AM/FM Selector Buttons
- ⓫ TUNING DOWN/UP Buttons
- ⓫ DELAY TIME Button
- ⓫ BALANCE Control
- ⓫ VCR 2 INPUT Jacks
- ⓫ LOUDNESS Button
- ⓫ MUTING Button

- ❶ TUNED Indicator
- ❷ STEREO Indicator
- ❸ MEMORY Indicator
- ❹ Surround Mode Indicators
- ❺ MONO Indicator
- ❻ SEARCH Indicator
- ❼ TAPE MONITOR Indicator
- ❽ VCR 1 DUBBING Indicator
- ❾ CENTER MODE Indicators
- ❿ Source Display
- ⓫ Band/Frequency Display
- ⓫ Test Tone Display
- ⓫ Center Level/Rear Level Display
- ⓫ PRESET Channel Display
- ⓫ DELAY TIME Display
- ⓫ SLEEP Time Display


Using the provided UR-405 Remote Control Unit, the AG-V3050 Receiver and some other TEAC components used with it can be controlled from your listening position.

Remote control of other TEAC components using the UR-405 is explained later, on page 24.


## Batteries

### Battery Installation


1. Remove the battery compartment cover of the remote control, referring to the diagram below.  
Push tab ❶ in the direction of the arrow, then lift cover ❷ to remove it.

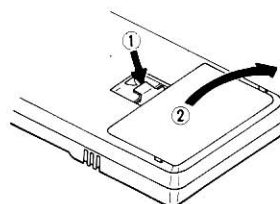

2. Insert two "SUM-3", "AA" or "R06" batteries. Make sure the batteries are installed with the correct polarities, following the markings in the battery compartment and as shown below.

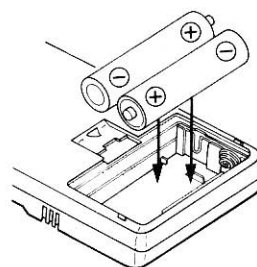

3. Replace the cover.  
Insert two claws ❶ into the slots, then press the cover in the direction of arrow ❷ until it clicks into place.

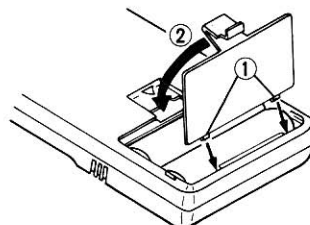

## Battery Replacement Period


If the operation range from the unit to the receiver begins to decrease, the batteries are nearly exhausted and should both be replaced.

## Precautions Concerning Batteries

- Be sure to insert the batteries with the correct (+) and (-) polarities, as shown in the battery compartment.
- Do not use an old and new batteries together.
- Use batteries of the same type. Never use batteries of different types together, even if they are the same shape.
- Both rechargeable and non-rechargeable batteries can be used. Refer to the cautions on their labels before use.
- Do not disassemble batteries and never dispose of old batteries by throwing them in a fire as they could explode.

## Using the Remote Control Unit

To use the UR-405, point it at the REMOTE SENSOR window of the receiver (or other TEAC component) within the range shown.

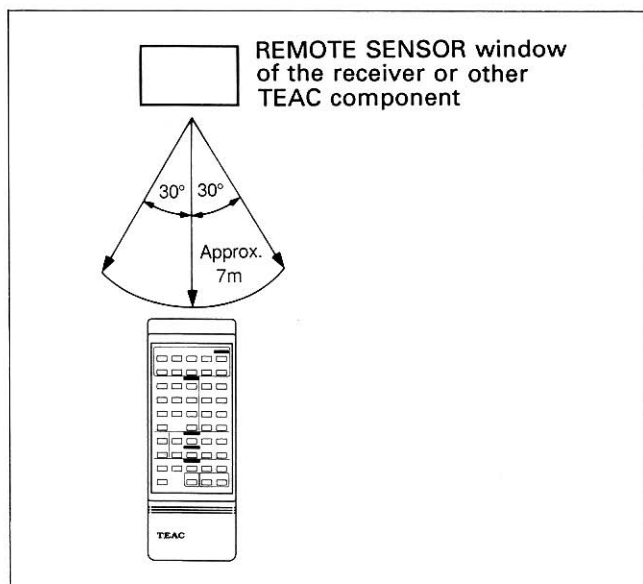

Certain buttons on the UR-405 and on the front panel of the AG-V3050 have the same or similar functions and have the same reference numbers. These are shown on page 10.

Buttons without numbers are for the operation of other TEAC components. For these buttons, refer to page 26.

## Cautions on Use of the Remote Control Unit

- Even within the range shown, if there is any obstacle between the remote control unit and the receiver, operation will be impaired.
- If you have other appliances controlled by infrared signals installed in the same room as your AG-V3050, these could be operated erroneously by signals from the remote control. (TEAC cannot take responsibility for any incidental or consequential damage this may cause.) Conversely, their remote controls could cause the AG-V3050 to operate erroneously.
- Placing objects on top of the remote control unit may inadvertently depress buttons and exhaust the batteries.
- If the remote control unit is not to be used for more than a month or so, remove the batteries to avoid damage caused by leakage. If batteries do leak, clean the battery compartment by wiping with a clean tissue and insert new batteries.



# AUDIO OPERATIONS

## Note:

The following points apply throughout the "AUDIO and VIDEO OPERATIONS" sections unless otherwise noted.

- To simplify explanations, instructions refer to names of buttons and controls on the front panel, making no mention of the use of remote control unit.
- Be sure the **TAPE 2 MONITOR** button is set to **OFF** (the **TAPE MONITOR** indicator will not appear in the display). Hereafter, this instruction will not be repeated.

## SLEEP Timer Function


This function allows you to preprogram the AG-V3050 to switch its own power off automatically. You can then enjoy the audio/video system for a specified amount of time without having to worry about turning the unit off later.

To engage SLEEP Timer, press the SLEEP button (2) until the approximate desired remaining power-on time is displayed. The time, displayed by MIN(ute), changes, as shown below, each time the button is pressed.

No display → 10 → 20 → 30 → 60 → 90


The SLEEP Time Display counts down in 1-MIN decrements until the preset amount of time is expired, at which time the power is automatically switched off.

## Basic Operations

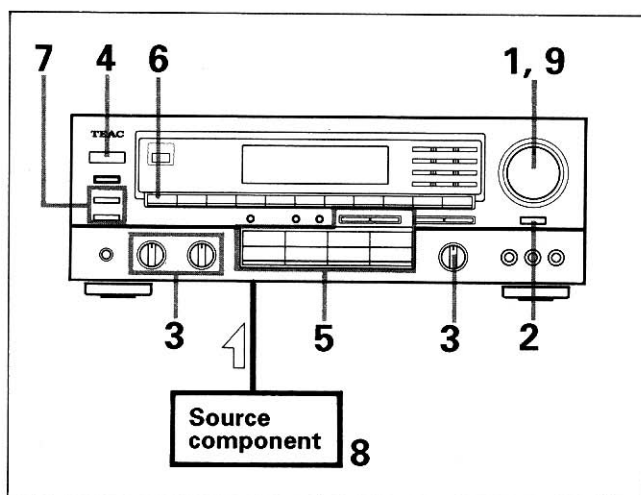

1. Set the **MASTER VOLUME** control to "0". This is to protect the speakers from a sudden high-level signal.
2. Set the **LOUDNESS** button to the **OFF** position.
3. Set the **BASS**, **TREBLE** and **BALANCE** controls to their center (click) positions.
4. Press the **POWER** button to turn on the power.
5. Select the required source by pressing one of the source selector buttons (including the **AM** and **FM** buttons).  
To listen to a source other than tape deck 2, check that the **TAPE MONITOR** indicator is not shown in the display; if it is, switch it off by pressing the **TAPE 2 MONITOR** button.
6. Press the **BYPASS** button to set the surround mode to **OFF**.
7. Select the front speakers to be used with the **SPEAKERS** select buttons. For details, refer to "SPEAKERS Select Buttons" in the following section.
8. Start playing the source component.
9. Gradually increase the volume with the **MASTER VOLUME** control and adjust the other controls as required.

## Audio Adjustments

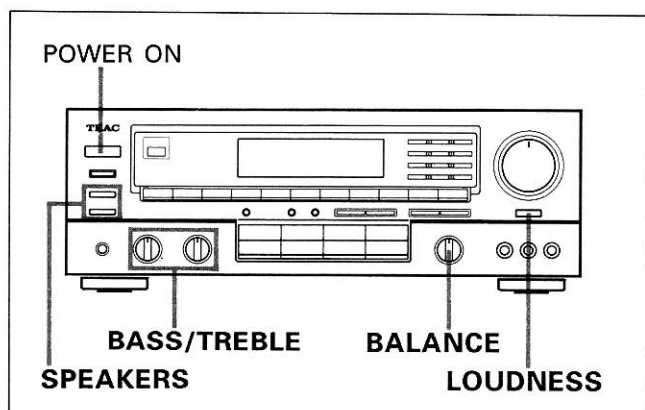

### SPEAKERS Select Buttons 15

When the A and/or B button is pressed, sound will be heard from the speakers connected to the SPEAKERS A and/or B terminals on the rear panel.

#### Note:

If both SPEAKERS Select Buttons A and B are pressed with speakers connected only to either SPEAKERS A or SPEAKERS B terminals, no sound will be heard from the speakers. If speakers are not connected to either terminal, leave the button corresponding to the unused terminal set to OFF.

### Tone (BASS and TREBLE) Controls 17

These are for boosting and attenuating low and high frequencies. Response will be "flat" with the controls in their center "click" positions.

### BALANCE Control 25

This shifts the sound toward the left or right speaker.

### LOUDNESS Button 27


This button compensates for the non-linear response of the human ear at low volumes. Set this switch to the OFF position when listening at normal levels.

### MUTING Button 28 (on the Remote Control Unit)

Press this to mute the sound from the speakers and headphones when answering the telephone, etc. To restore the original volume, press the MUTING button again. While muting is engaged, the MASTER VOLUME level indicator will flicker.

## Radio Reception

### Auto Tuning

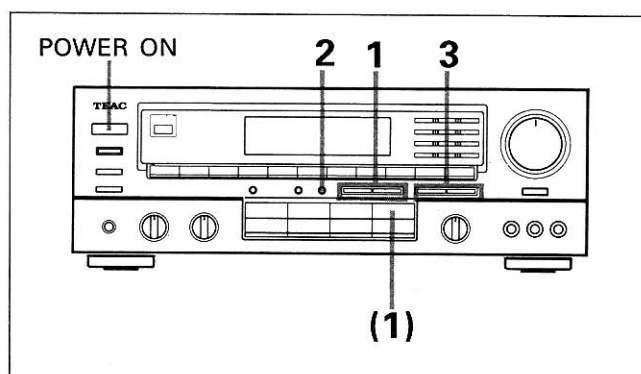

1. Press the AM or FM button\*.

\* The TUNER button can also be pressed instead when you want to listen to a station selected last by changing from another source.

2. Press the AUTO/MANU(al) TUNING button so that the SEARCH indicator appears in the display.
3. Press the UP or DOWN TUNING button. The next station broadcasting at a frequency higher or lower than that of the current station is automatically detected and tuned in.

### • FM MODE Button (20)

Pressing this button alternates between Stereo mode and Mono mode (MONO indicator lights).

#### Stereo

FM stereo broadcasts are received in stereo and the STEREO indicator lights in the display. Monophonic broadcasts are received in mono. If FM broadcasts with weak signal strength are received, the FM muting function works automatically to cut the signals, eliminating loud noise.

#### Mono


To compensate for weak FM stereo reception, select this mode. Reception will now be forced monaural, reducing unwanted noise.

### • TUNED Indicator (6's 1)

"TUNED" appears in the display when a broadcast is correctly tuned in.

## Manual Tuning

Manual Tuning is generally used to tune to stations broadcasting a signal that is too weak to be received by Auto Tuning.

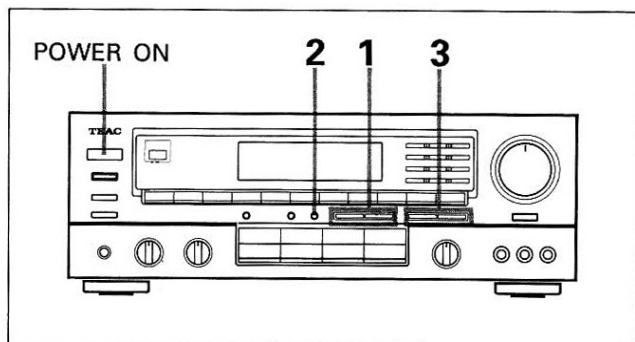

1. Press the AM or FM button.
2. Press the AUTO/MANU(al) TUNING button so that the SEARCH indicator does not appear in the display.
3. When the UP or DOWN TUNING button is pressed momentarily, the frequency changes by a fixed step (see STEPS below). If either tuning button is held depressed for more than 0.5 seconds, the frequency changes continuously until the button is released.

### STEPS

#### U.S.A./Canada Models

FM: 100-kHz steps

AM: 10-kHz steps

#### Europe/General Export Models


FM: 50-kHz steps

AM: 9-kHz steps

## Preset Tuning

The AG-V3050 has a memory for 30 preset stations. If the frequencies of broadcasts are stored in this memory, they can be tuned in by a simplified procedure.


### ■ Presetting

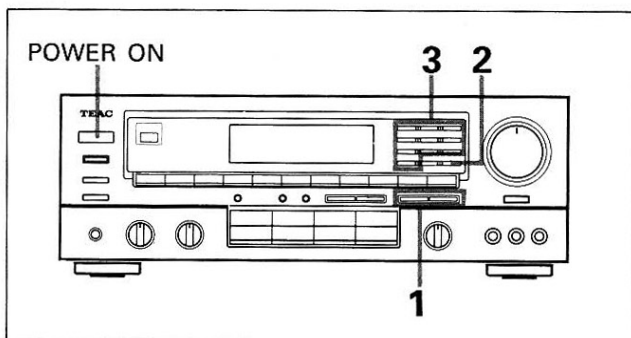

1. Tune to a station by either Auto or Manual tuning.
2. Press the MEMORY button; the MEMORY indicator will flicker in the display for approximately 5 seconds.
3. While the MEMORY indicator is flickering, press the numeric key(s) to assign the channel in which the data (AM or FM band and frequency) for the broadcast is to be stored.


**Note:** If a frequency has already been stored in a specified channel, the old data will be lost and replaced by the new data.

#### Ex.: Channel 1

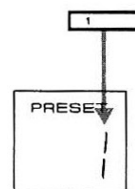


**Note:** After programming preset channel 1 or 2, wait until the MEMORY indication disappears before performing any other function.

#### Ex.: Channel 15

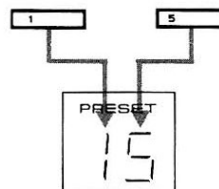

Ex.: Channel 20

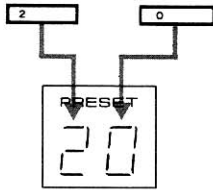

Ex.: Channel 30



4. To release the memory function while the MEMORY indicator flickers in the display, press the UP or DOWN TUNING button.

### ■ Recalling Frequencies


Press the numeric key(s) corresponding to the channel number to tune directly to a broadcast.

**Note:** After recalling preset channel 1 or 2, wait until the stored band and frequency number appear in the display before performing any other function.

### ■ Using the Memory Scan function

When the M.SCAN button (12) is pressed, the preset channels in which data (bands and frequencies) have been stored are scanned at five-second intervals in numerical order of preset channels. When you hear a broadcast you want to listen to, release the Memory Scan function by pressing the M.SCAN button again.

## Listening to Records and Compact Discs

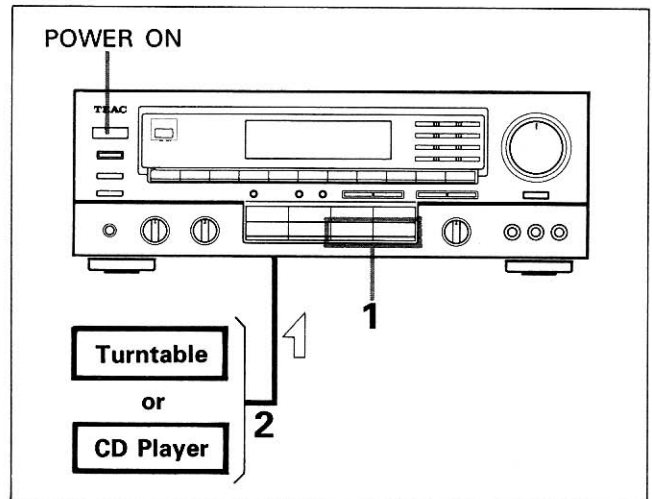


1. Press the PHONO or CD button.
2. Play the turntable (with a moving magnet cartridge) or CD player.

## Playing Tapes

### **Note:**

If two TEAC tape decks are used in the system, the use of the UR-405 remote control unit may cause the two decks to operate simultaneously.

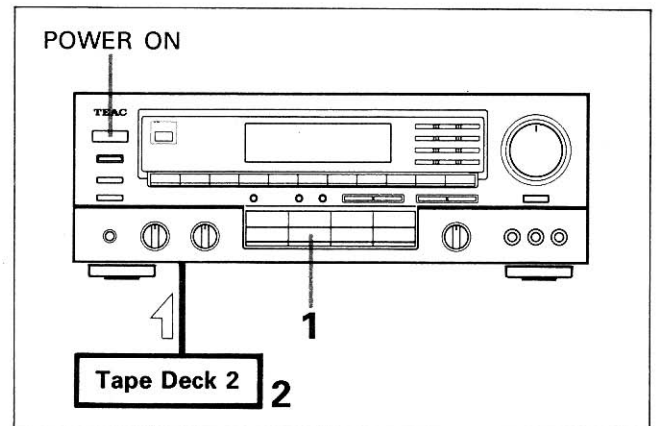

1. Set the TAPE 2 MONITOR button to ON; the TAPE MONITOR indicator will appear in the display.
2. Operate tape deck 2 for playback.

### ■ Playing tape deck 1

To play tape deck 1, set the TAPE 2 MONITOR button to OFF and press TAPE 1 button. Then operate tape deck 1 for playback.




## Recording Tapes

### Note:

If two TEAC tape decks are used in the system, the use of the UR-405 remote control unit may cause the two decks to operate simultaneously.

## Recording a Source other than Tape

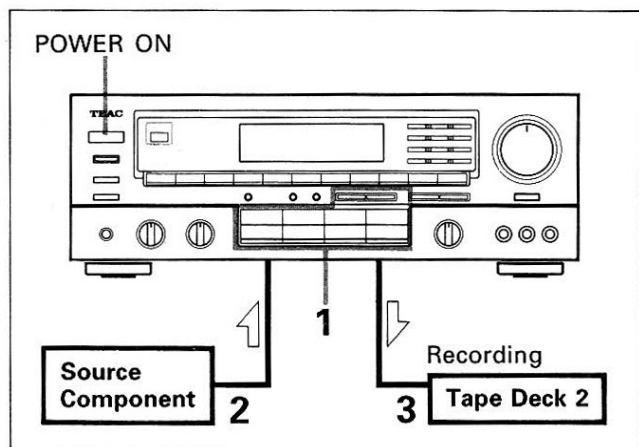

1. Make sure the TAPE 2 MONITOR button is set to OFF, then press the source selector button (including AM/FM buttons) corresponding to the source to be recorded.
2. Play the source.
3. Operate tape deck 2 for recording.


### ■ Tape Monitoring

If tape deck 2 has separate record and playback heads, during recording, the recorded sound can be heard from the speakers with the TAPE 2 MONITOR button set to ON.

### ■ Simultaneous Recording

A single source can be recorded simultaneously by tape decks 1 and 2. To do this, after step 2 above, operate both decks for recording.

## Tape Dubbing (from Tape Deck 1 to Tape Deck 2)

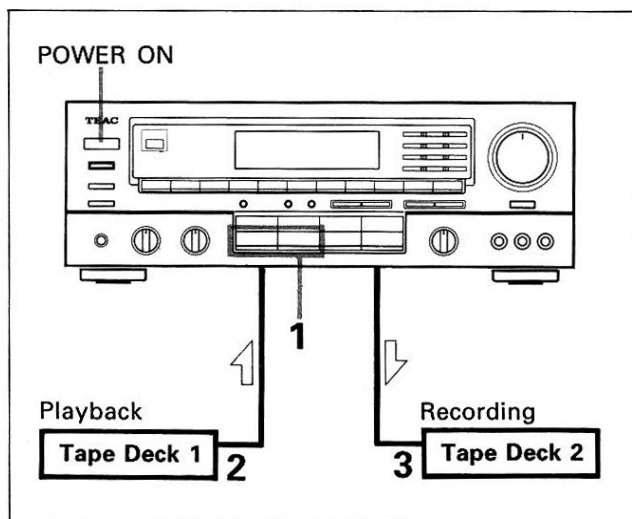

1. Make sure the TAPE 2 MONITOR button is set to OFF, then press the TAPE 1 button.
2. Play tape deck 1.
3. Operate tape deck 2 for recording.

### ■ Tape Monitoring


If tape deck 2 (the tape deck used for recording) has separate record and playback heads, during dubbing, the recorded sound can be heard from the speakers with TAPE 2 MONITOR button set to ON.

# VIDEO OPERATIONS

## Playing Video Sources

### Note:


For playing video software using a certain Surround Effect function, refer to the SURROUND EFFECTS section.

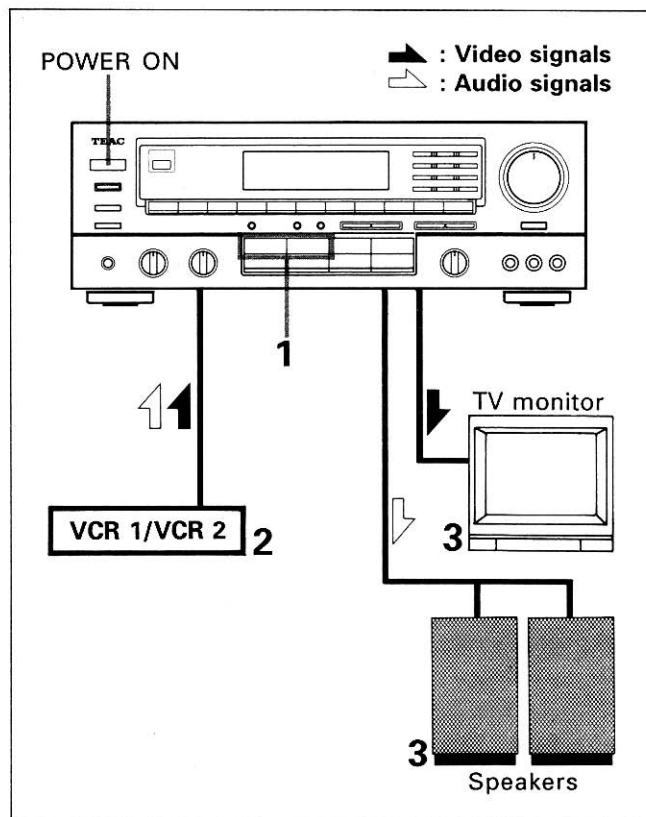

1. Press the VCR 1 or VCR 2 button.
2. Play the component corresponding to the button pressed.
3. The picture from the video source can be seen on the TV and the sound from the video source will be heard from the speakers.

## Recording with a Video Deck


### Tape Dubbing (from VCR 2 to VCR 1)

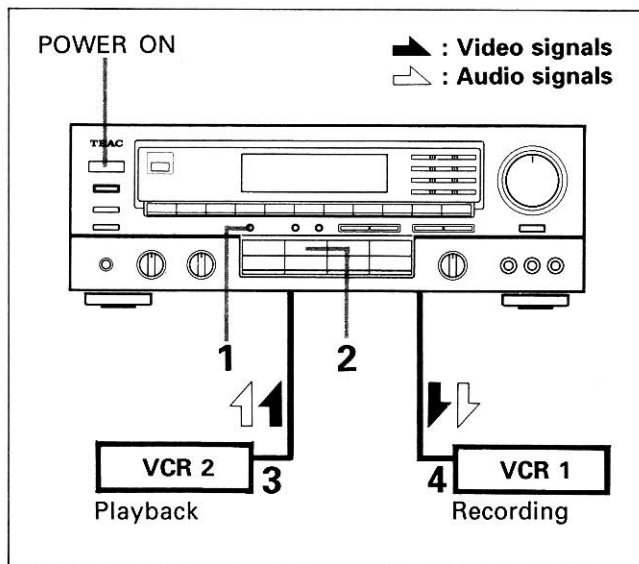

1. Press the VCR 1 DUBBING button so that the VCR 1 DUBBING indicator appears in the display.
2. Press the VCR 2 button with the TAPE 2 MONITOR set to OFF.
3. Operate VCR 2 for playback.
4. Operate VCR 1 for recording. In this way, the video/audio signals from VCR 2 can be dubbed onto VCR 1.

## S.A.V.E. (Second Audio Source for Video Editing) SYSTEM Function


This feature lets you replace the sound from a VCR with sound from an AUDIO source such as CD during video signal dubbing.

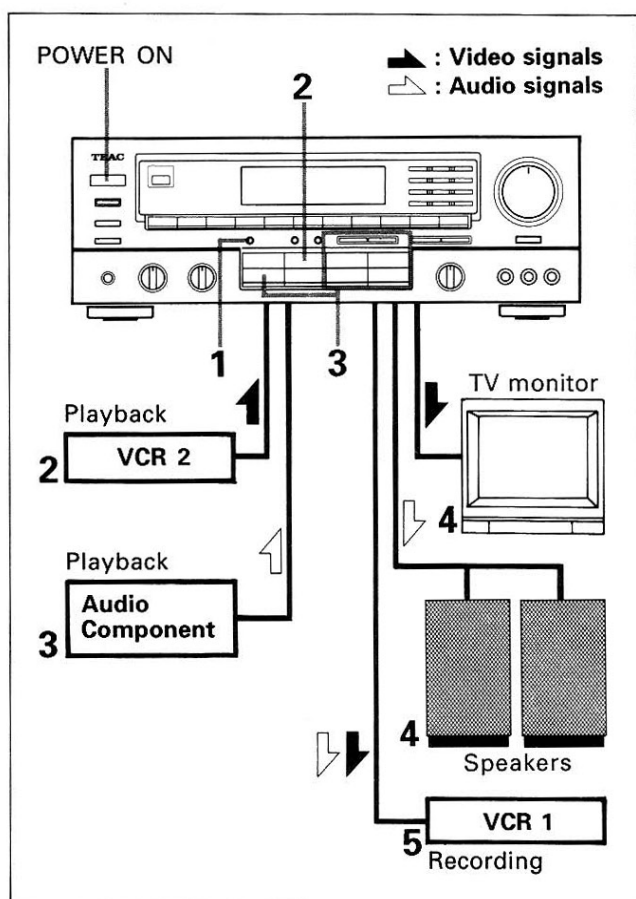

1. Make sure the VCR 1 DUBBING button is set to OFF.
2. Press the VCR 2 button and operate VCR 2 for playback.
3. Select the audio source with the source selector buttons (including AM/FM buttons and excluding TAPE 2 MONITOR button), and then operate the selected audio component for playback.
4. Now you can watch the picture from the video component on the TV, and listen to the sound from the audio component through the speakers.  
**Note:** Be sure to observe the order of steps 2 and 3.
5. Operate VCR 1 for recording. In this way, the S.A.V.E. operation will be completed.

## A/V Background Recording Function

While you are actually listening to the sound, you can perform video-tape dubbing in the background.

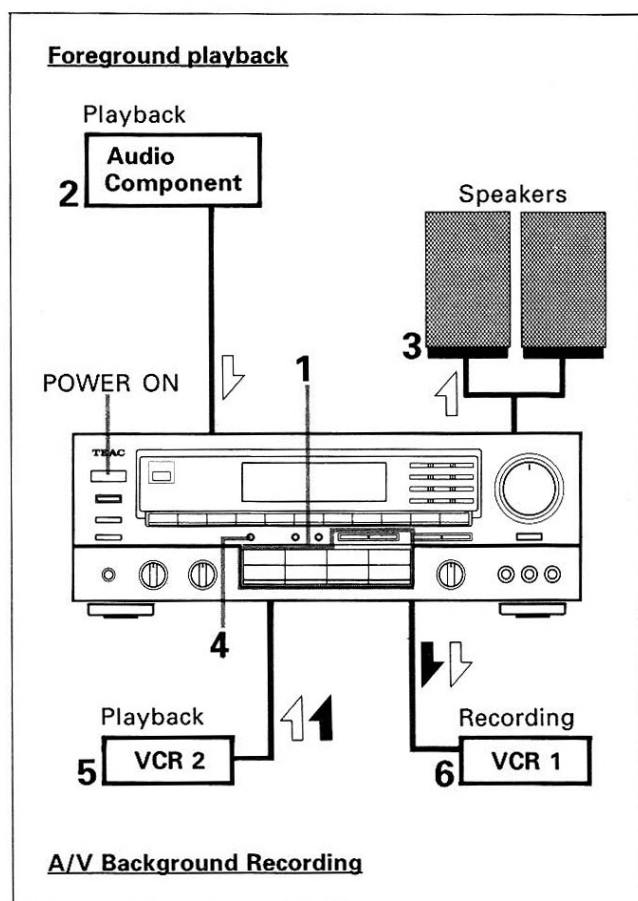

1. With the source selector buttons (including AM/FM buttons), select the program source you want to actually listen to.
2. Play the component corresponding to the button pressed above.
3. Now you can listen to the source through the speakers.
4. Press the VCR 1 DUBBING button so that the VCR 1 DUBBING indicator appears in the display.
5. Operate VCR 2 for playback.
6. Operate VCR 1 for recording. A/V Background Recording Function operation is thus performed.

# SURROUND EFFECTS


The AG-V3050 provides three surround effect modes: two for sources encoded with Dolby Surround information and one for source not encoded with this information.


## Available Surround Modes

### DOLBY PRO LOGIC Surround

Certain movies are encoded with Dolby Surround; when you watch these movies in a theater, you hear sound from speakers both at the front and the rear, resulting in a unique "surround sound" effect. For example, it can create the effect of a car or plane moving from the front right to the rear left of the theater. Many of these movies are available on video tapes and videodiscs, and the AG-V3050 is equipped to recreate the same surround sound effect that you hear in a movie theater in your home. This is one of its main features, making the ideal receiver for your home audio/video system.

To enjoy the Dolby Pro Logic Surround effect, you will have to install one pair of front speakers, one center speaker and one pair of rear speakers (Detailed speaker installation is mentioned later), and you will have to play video sources carrying the

"  DOLBY SURROUND " \*mark.

\* Manufactured under license from Dolby Laboratories Licensing Corporation. Additionally licensed under one or more of the following patents: U.S. numbers 3,632,886, 3,746,792, and 3,959,590; Canada numbers 1,004,603 and 1,037,877. "Dolby" and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.

### DOLBY 3 STEREO Surround

To enjoy the Dolby Surround effect without rear speakers, select this mode instead of Dolby Pro Logic mode. Front speakers receive rear (surround) speaker signals in addition to front speakers signals. Center speaker works similarly as that of Dolby Pro Logic mode. In this way, you can enjoy playback sound having superior sound positioning.


### HALL Surround

For stereo sources not encoded with Dolby Surround, this mode creates a surround effect including rich natural reverberations similar to those heard in a concert hall.

### Selecting the Surround Effect

The surround effect can be selected by pressing one of four front panel SURROUND MODE buttons (4)(press BYPASS when you do not require any of the three surround effects) or by pressing the SURROUND MODE button (4) on the remote control until the required surround mode appears in the display.

- Each time the SURROUND MODE button on the remote control is pressed, the surround mode changes cyclically, as shown below.

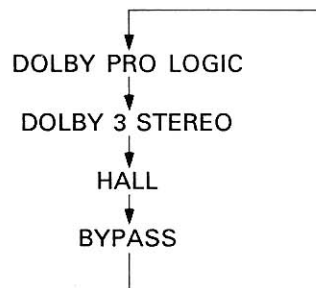




# Speaker Installation

The tables below show speaker arrangements according to surround mode. Every installation is different; place the speakers where the sound seems best to you.

## DOLBY PRO LOGIC and DOLBY 3 STEREO Surround Modes

Center Mode \ Surround Mode	DOLBY PRO LOGIC	DOLBY 3 STEREO
<b>NORMAL</b> Select this mode if you use a small center speaker. The bass sound of the center channel is output from the front (L and R) speakers, as a small speaker cannot produce enough bass.		
<b>WIDE</b> Select this mode if you use a medium to large center speaker.		
<b>PHANTOM</b> Select this mode when the center speaker is not used. The sound of the center channel is output from the front (L and R) speakers.		Not provided

## HALL Mode

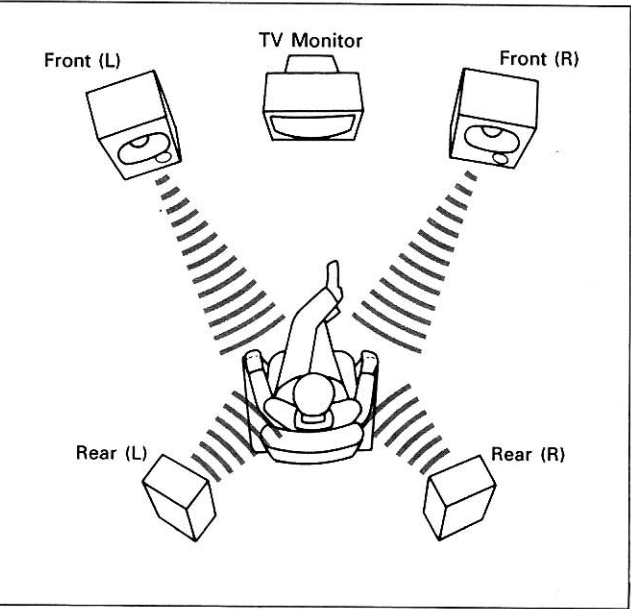

## Delay Time

In the surround modes, the sound from the rear speakers should be delayed slightly, relative to that from the front speakers. The optimum delay time will be different in rooms of different sizes and will depend on acoustic properties, whether the walls and furnishings reflect or absorb sound, etc. It is recommended that you try different delay times to obtain the best effect. The delay is digitally synthesized, for the highest sound quality with minimum noise and distortion.


The delay time can be set independently for each surround mode using the DELAY TIME button (Ⓢ), with the current setting shown in the display.

### Delay Time Setting

Surround Mode	Adjustable Range (with 5ms steps)
DOLBY PRO LOGIC	15 – 30ms
HALL	5 – 30ms

## Playing Surround Sound


### DOLBY PRO LOGIC Surround

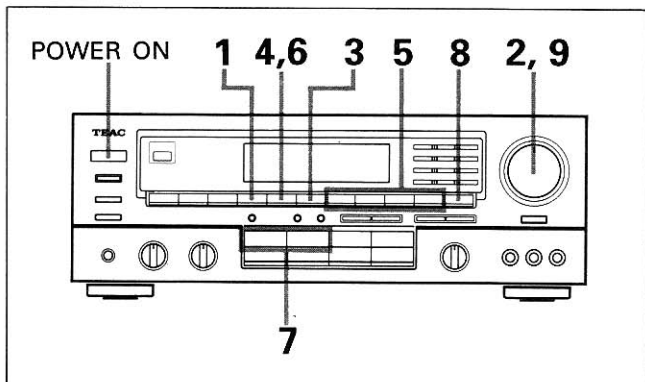

### Balancing Relative Volumes among Speakers

1. Press the DOLBY PRO LOGIC button.
2. Set the MASTER VOLUME control to the normal listening level.
3. Press the CENTER MODE button to select the center speaker mode you desire, NORMAL, WIDE or PHANTOM mode.

4. Press the TEST TONE button to send the test tone signal to each speaker in succession as shown below.




**Note:** If PHANTOM mode is selected in step 3, the sound of center speaker signal is actually output from the front (L and R) speakers.

5. Adjust the CENTER LEVEL and REAR LEVEL controls so that test tone volumes are equal on all speakers.
6. Press the TEST TONE button to cease testing.

### Adjusting the Delay Time

7. Play the video software with the DOLBY SURROUND mark.
8. Adjust the delay time as desired in 4 steps by pressing the DELAY TIME button:




20msec is standard.

### Playing Surround Sound

9. Adjust the MASTER VOLUME control for the most appropriate overall volume.

### DOLBY 3 STEREO Surround

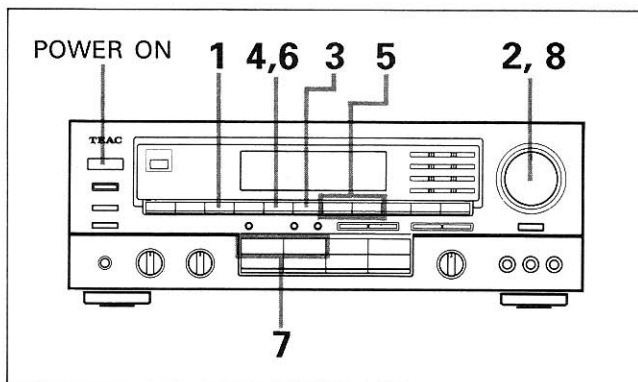

### Balancing Relative Volumes among Speakers

1. Press the DOLBY 3 STEREO button.
2. Set the MASTER VOLUME control to the normal listening level.
3. Press the CENTER MODE button to select the center speaker mode you desire, NORMAL or WIDE mode.

# MEMORY BACKUP FUNCTION

- Press the TEST TONE button to send the test tone signal to each speaker in succession as shown below.



- Adjust the CENTER LEVEL controls so that the center speaker sound level is equal to that of the left speaker and then to that of the right speaker.
- Press the TEST TONE button to cease testing.


## Playing Surround Sound

- Play the video software with the DOLBY SURROUND mark.
- Adjust the MASTER VOLUME control for the most appropriate overall volume.

As long as the power plug is connected to a wall outlet, the following items, set before the receiver was switched off, are maintained indefinitely. Should the power plug be disconnected from the wall outlet, they will be retained in memory for about one week.

- Source button (including the TAPE 2 MONITOR, AM and FM buttons) selected last
- Reception frequency  
Reception band  
Preset station memories  
FM MODE button setting  
AUTO/MANU TUNING button setting
- Surround mode  
Center speaker mode  
Center speaker level  
Rear speaker level  
Delay time

## HALL Surround

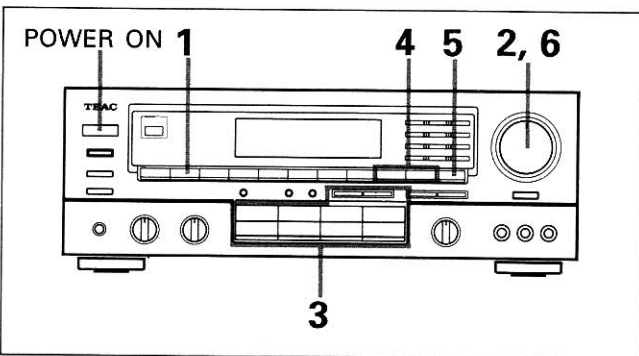


## Balancing Relative Volumes among Speakers

- Press the HALL button.
- Set the MASTER VOLUME control to the normal listening level.
- Play the source component.
- Adjust the rear speakers volume relative to that of the front speakers as desired.

## Adjusting the Delay Time

- Adjust the delay time as desired in 6 steps by pressing the DELAY TIME button:




## Playing Surround Sound

- Adjust the MASTER VOLUME control for the most appropriate overall volume.

# TEAC SYSTEM REMOTE-CONTROLLED OPERATION

## Using a CD Player and a Cassette Deck with a REMOTE SENSOR Window

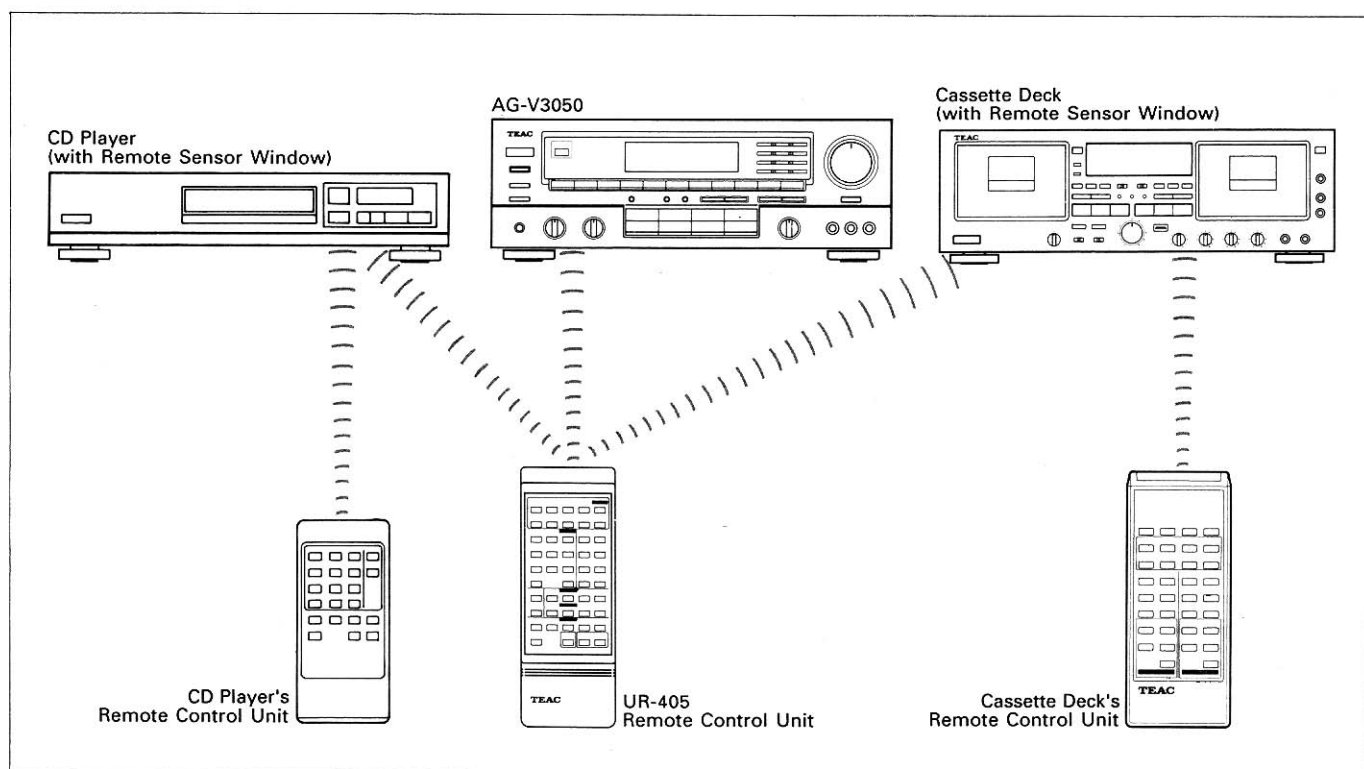

As shown, if the other TEAC components have REMOTE SENSOR windows, the provided UR-405 Remote Control Unit can remotely control the operations of these other components directly, in addition to the remote control of the AG-V3050 receiver. If the other components require operations beyond the basic ones provided by the UR-405, use the remote control units provided with the components.


### Note:

The following CD players cannot be directly controlled using the UR-405 Remote Control Unit.


To remote-control them using the UR-405, connect the AG-V3050 to the CD players using the remote control cable (optional), then operate the UR-405 pointing it toward the AG-V3050.

### Relevant models:

CD-P250, CD-P280, ED-570, PD-435, PD-485, PD-495, PD-555.

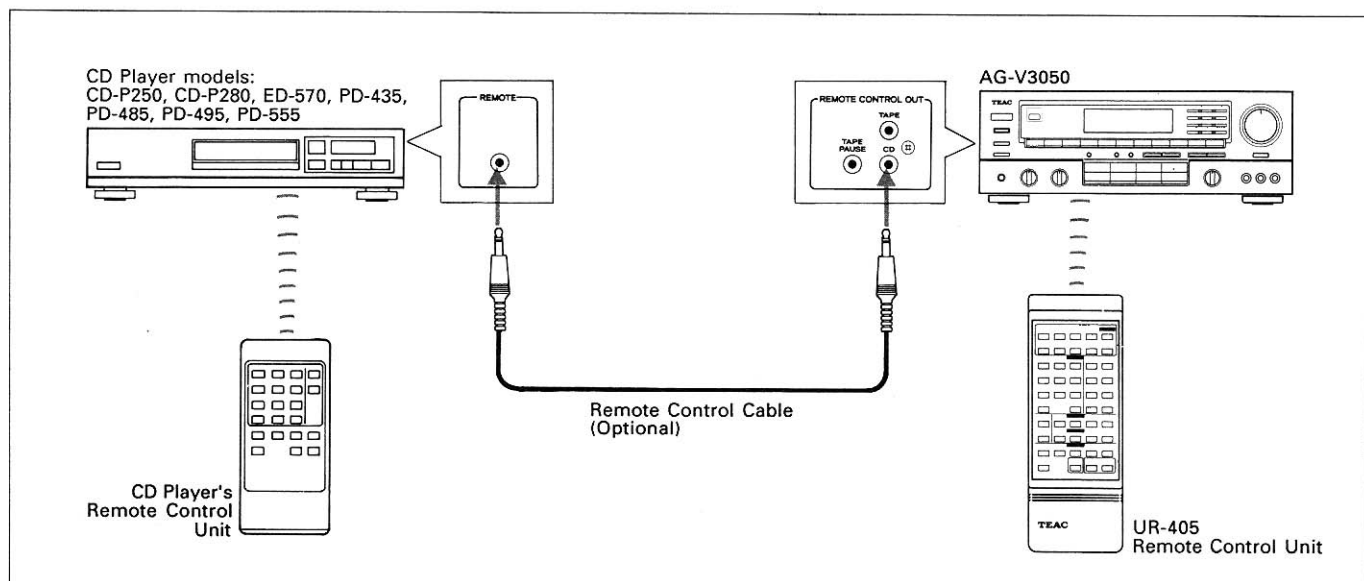


## Using a Cassette Deck without a REMOTE SENSOR Window

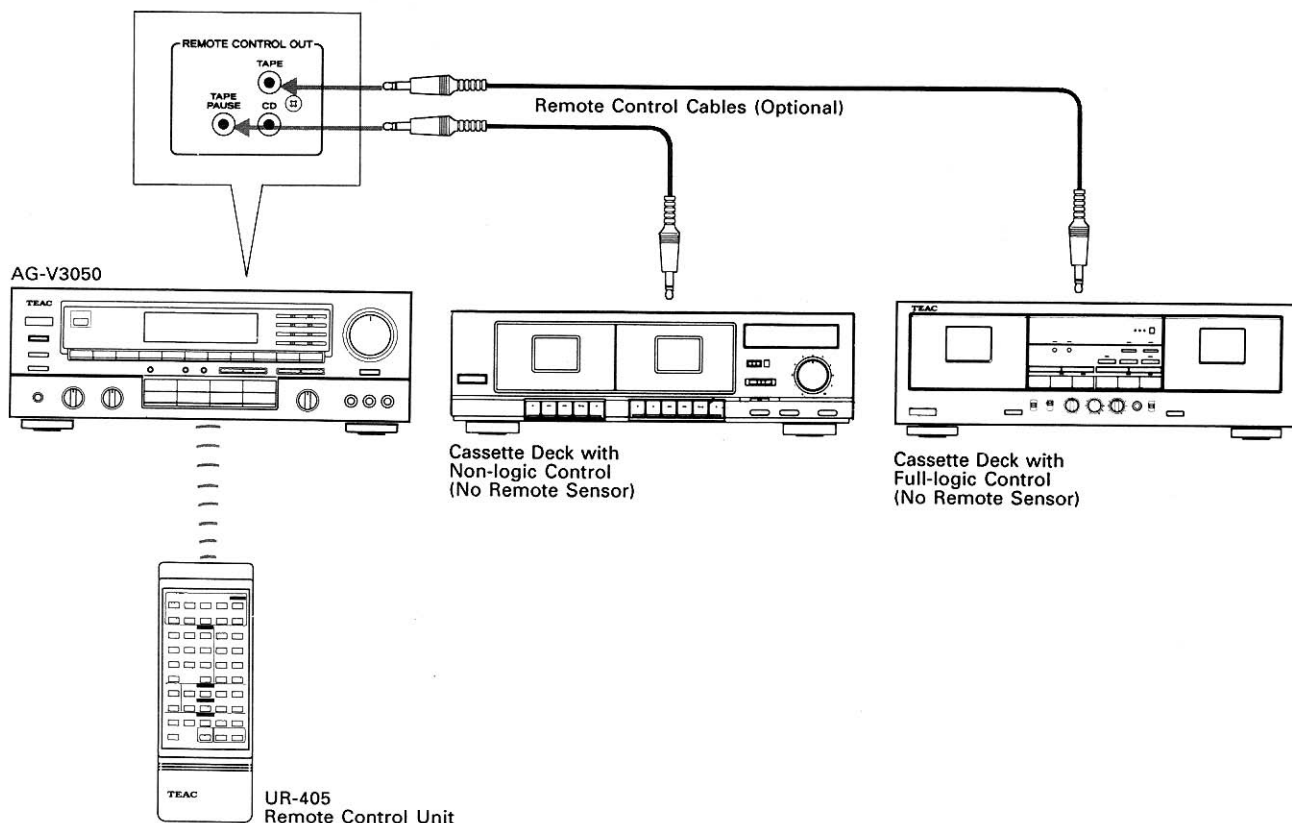

The illustration shows a system using UR (Unified Remote Control) cassette decks without REMOTE SENSOR windows. When a deck with full-logic control is connected to the AG-V3050 receiver using a remote control cable (optionally available), its basic operations are remote-controlled using the UR-405 Remote Control Unit. When a deck with non-logic control is connected, only the pause mode can be remote-controlled.

## Buttons for the Operation of Other TEAC Components

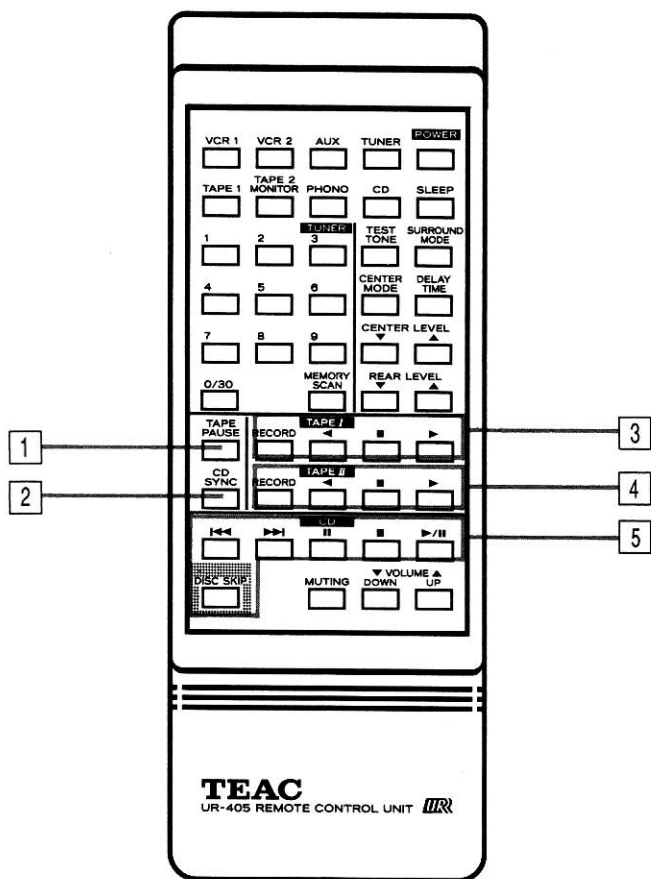

Remote Control Unit (UR-405)

### Note:

Do not confuse "TAPE I" as described in this section and "TAPE 1" which means the tape deck connected to the TAPE 1 terminals. The same thing also applies to "TAPE II" and "TAPE 2".

### 1 TAPE PAUSE button

Can only be used with cassette decks with non-logic control. Press once to set the cassette deck to the pause mode; press again to restart.

### 2 CD SYNC button

When the AG-V3050 is used in a system with a TEAC CD Player and a TEAC cassette deck (with full-logic control), it is possible to synchronize the operations of the CD player and cassette deck, so that they can be started at exactly the same time for copying a CD onto a tape. In this configuration, the CD player's CD/DECK SYNC terminal and the cassette deck's CD/DECK SYNC terminal should be connected using the optional WR-7000 sync cable (note that this is different from the optional remote control cable). Synchronized operation of the CD player and cassette deck can be started by pressing either the CD SYNC button on the remote control unit or the CD SYNC button on the cassette deck.

### 3 TAPE I buttons

The TAPE I mechanism of a double-transport cassette deck with full-logic control can be operated using these buttons.

#### Notes:

- To start recording, simply press the RECORD button; it does not have to be pressed together with PLAY.
- If the TAPE I mechanism of the double-transport cassette deck does not have a recording function, pressing the TAPE I RECORD button will have no effect.

### 4 TAPE II buttons

The TAPE II mechanism of a double-transport cassette deck with full-logic control can be operated using these buttons. They are also used to operate a single-transport cassette deck with full-logic control.

#### Note:

- To start recording, simply press the RECORD button; it does not have to be pressed together with PLAY.

### 5 CD buttons

- **SKIP (◀◀, ▶▶) buttons:** Each time these are pressed, the pickup moves to the beginning of the next tune in either the forward or reverse direction. If held depressed, skipping continues until the button is released.
- **PAUSE (||), PLAY/PAUSE (▶/||) buttons:** To temporarily stop CD play, press the PAUSE button if the CD player has an independent PAUSE button; press the PLAY/PAUSE button if it has a PLAY/PAUSE button.
- **STOP (■) button:** Press to stop the CD player.
- **DISK SKIP button:** Selects the next disc in a CD auto-changer.



# TROUBLESHOOTING

To determine any problem with your receiver, always check the most obvious possible causes first. If any problem still remains after you have checked the items below, consult your nearest TEAC dealer.

Problem	Probable Cause	Remedy
<b>Power</b>		
No power	Power cord is not plugged in.	Plug in the power cord securely.
<b>Amplifier</b>		
Sound cannot be heard.	The required SPEAKERS select button is not ON.	Set the required SPEAKERS select button to ON.
	The MUTING button is set to ON.	Be sure to set the MASTER VOLUME control to minimum then set the MUTING button to OFF.
	The TAPE 2 MONITOR button is ON.	Set the TAPE 2 MONITOR button to OFF.
Sound is only heard from one channel.	The BALANCE control is set to one end.	Adjust the BALANCE control.
	One of the input cords is disconnected.	Connect the input cords securely.
Low-frequencies are insufficient and the image of mid-frequencies is not fixed.	The plus and minus connections of either front speaker are reversed.	Connect the speakers with the correct polarities.
Hum or noise.	Turntable is not grounded.	Connect the ground wire to the GND terminal on the rear panel.
	The signal cords of the turntable are not securely connected to the PHONO terminals.	Connect the cords to the PHONO terminals securely.
	Audio equipment is too near the TV.	Move the TV away from the audio equipment.
<b>Tuner</b>		
No tuning.	The antenna is not connected.	Connect the antenna.
Auto tuning not possible.	Signal strength of stations is too weak.	Perform manual tuning.
		Use a better external antenna and adjust its direction.
STEREO indicator fails to light during stereo broadcasts.	FM MODE button is set to Mono mode.	Set the FM MODE button to Stereo mode.
Electromagnetic interference.	Ignition noise from cars.	Use the external antenna and install it away from the street.
	TV too near the receiver.	Move the receiver away from the TV.

Problem	Probable Cause	Remedy
<b>Surround Effects</b>		
No sound from the rear speakers.	SURROUND MODE switch is set to BYPASS.	Set the switch to the desired surround mode position.
	When the MASTER VOLUME setting is at low level, the volume of the rear speakers becomes even lower.	Increase the volume level of the rear speakers using the REAR LEVEL control.
No sound from the center speaker.	SURROUND MODE switch is not set to DOLBY PRO LOGIC or DOLBY 3 STEREO.	Set the switch to DOLBY PRO LOGIC or DOLBY 3 STEREO.
	When the MASTER VOLUME setting is at low level, the volume of the center speaker becomes even lower.	Increase the volume level of the center speaker using the CENTER LEVEL control.
	CENTER MODE switch is set to PHANTOM.	Set the switch to NORMAL or WIDE.
<b>Remote Control Unit</b>		
Remote control impossible.	The batteries are exhausted.	Replace with new batteries.
	The remote control unit is too far from the receiver or out of the effective range.	Operate the remote control unit within the effective range.
	There is an obstacle between the receiver's remote sensor and the remote control unit.	Remove the obstacle.

**Caution:**

Since the receiver incorporates a microprocessor, it may not operate correctly because of external noise, etc. If this happens, disconnect the power plug from the wall outlet, and wait approx. ten seconds, reconnect the power plug then turn the POWER switch ON and restart operations.

# SPECIFICATIONS

## Amplifier Section

### Output Power (Front):

#### F.T.C. Rating:

100 watts RMS per channel minimum, both channels driven into 8 ohms from 20 Hz to 20 kHz with no more than 0.07% total harmonic distortion (U.S.A./ Canada)

#### RMS Power (20 Hz – 20 kHz):

95 watts/8 ohms, 0.07% (Europe)

105 watts/8 ohms, 0.07% (General Export)

DIN Power: 115 watts/8 ohms (Europe)

### Surround Output Power (0.7% THD, 1 kHz):

3 × 65 watts (Front, Center)

1 × 35 watts (Rear)

### Total Harmonic Distortion (Front):

0.01% (at 100 watts, 1 kHz)

### Intermodulation Distortion (Front):

0.02% (at 100 watts)

### Delay Time:

DOLBY PRO LOGIC: 15 – 30 ms (5 ms steps)

HALL: 5 – 30 ms (5 ms steps)

### Input Sensitivity/Impedance:

PHONO: 2.5 mV/47 k ohms

LINE\*: 150 mV/47 k ohms

### Frequency Response:

PHONO: 30 Hz – 20 kHz, ± 1 dB

LINE\*: 10 Hz – 60 kHz, – 3 dB

### Signal-to-Noise Ratio:

PHONO: 70 dB

LINE\*: 76 dB

### Tone Control:

BASS: ± 10 dB at 100 Hz

TREBLE: ± 10 dB at 10 kHz

## FM Tuner Section

(without notes 98.1 MHz, 65 dBf)

### Tuning Range:

87.5 MHz – 108.0 MHz (100 kHz steps)

(U.S.A./Canada)

87.50 MHz – 108.00 MHz (50 kHz steps)

(Europe/General Export)

### Usable Sensitivity (IHF):

Mono: 13.2 dBf (U.S.A./Canada/General Export)

Mono: 16.2 dBf (Europe)

### 50 dB Quieting Sensitivity:

Mono: 18 dBf (U.S.A./Canada/General Export)

Mono: 20 dBf (Europe)

Stereo: 38 dBf (U.S.A./Canada/General Export)

Stereo: 42 dBf (Europe)

### Capture Ratio:

1.5 dB (U.S.A./Canada)

2.5 dB (Europe/General Export)

### Image Rejection Ratio:

40 dB (U.S.A./Canada/General Export)

80 dB (Europe)

### AM Suppression Ratio: 60 dB

### RF Intermodulation Ratio: 65 dB

### Total Harmonic Distortion (1 kHz):

Mono: 0.2%

Stereo: 0.4%

### Frequency Response: 30 Hz – 15 kHz, ± 1 dB

### Stereo Separation (1 kHz): 45 dB

### Signal-to-Noise Ratio:

Mono: 73 dB

Stereo: 70 dB

## AM Tuner Section

### Tuning Range:

530kHz - 1,710 kHz (10 kHz steps)

(U.S.A. / Canada / General Export)

522 kHz - 1,611 kHz (9 kHz steps)

(Europe)

### Usable Sensitivity: 50 dB/m

### Total Harmonic Distortion: 0.5% at 85 dB/m

### Signal-to-Noise Ratio: 48 dB at 85 dB/m

## Video Section

### Input Sensitivity/Impedance: 1.0 Vp-p/75 ohms

### Output Level/Impedance: 1.0 Vp-p/75 ohms

### Frequency Response: 5 Hz – 6 MHz, – 3 dB

### Signal-to-Noise Ratio: 60 dB (1 kHz, HPF IN)

## General

### Power Requirements:

120 V AC, 60 Hz (U.S.A./Canada)

230 V AC, 50 Hz (Europe)

115/230 V AC, 50-60 Hz (General Export)

### Power Consumption:

2.9 A (U.S.A./Canada)

670 W (Europe/General Export)

### AC Outlets:

Switched × 2, Total 100 W max. (1 A max.)

(U.S.A./Canada)

Switched × 1, 100 W max.

(Europe/General Export)

### Dimensions (W×H×D):

435 × 156 × 380 mm

(17-1/8" × 6-1/8" × 14-15/16")

### Weight (net): 12 kg (26-7/16 lbs.)

### Standard Accessories:

AM Loop Antenna × 1

FM "T" Type Antenna × 1

Remote Control Unit (UR-405) × 1

Battery ("AA", "R06", SUM-3) × 2

Matching Transformer (300 ohms to 75 ohms) × 1

(Europe)

AC Plug Adapter × 1 (General Export)

\* LINE means CD, VCR 1, VCR 2, AUX, TAPE 1 and TAPE 2.

● Improvements may result in specifications and features changing without notice.

● Illustrations may differ slightly from production models.

# SOMMAIRE

<b>PRECAUTIONS</b> .....	<b>30</b>
<b>RACCORDEMENTS</b> .....	<b>31</b>
Raccordements de système .....	31
Prises d'entrée magnétoscope 2 (VCR 2 INPUT).....	32
Raccordements d'antenne .....	32
Antenne FM (Etats-Unis/Canada/Exportation générale).....	32
Antenne FM (Europe).....	33
Antenne AM .....	34
Raccordements de haut-parleur .....	35
<b>COMMANDES ET INDICATEURS</b> .....	<b>36</b>
<b>TELECOMMANDE</b> .....	<b>37</b>
Piles.....	37
Mise en place des piles.....	37
Remplacement des piles.....	38
Précautions concernant les piles.....	38
Utilisation de la télécommande.....	38
Précautions sur l'utilisation de la télécommande.....	38
<b>FONCTIONNEMENT AUDIO</b> .....	<b>39</b>
Fonctionnement de base.....	39
Réglages audio.....	40
Réception de la radio.....	40
Syntonisation automatique .....	40
Syntonisation manuelle .....	41
Syntonisation pré réglée .....	41
Ecoute de disques ou de disques audionumériques.....	42
Lecture de cassettes .....	42
Enregistrement de cassettes.....	43
Enregistrement d'une source autre qu'une bande .....	43
Copie de bande (de la platine 1 vers la platine 2).....	43

<b>FONCTIONNEMENT VIDEO</b> .....	<b>44</b>
Lecture de sources vidéo.....	44
Enregistrement avec une platine vidéo .....	44
Copie de bande (du magnétoscope 2 vers le magnétoscope 1) .....	44
Fonction S.A.V.E (Second Audio Source for Video Editing) SYSTEM .....	45
Fonction d'enregistrement A/V indépendant .....	45
<b>EFFETS SURROUND</b> .....	<b>46</b>
Modes Surround disponibles.....	46
Surround DOLBY PRO LOGIC.....	46
Surround DOLBY 3 STEREO .....	46
Surround HALL .....	46
Sélection de l'effet Surround.....	46
Installation des haut-parleurs.....	47
Modes Surround DOLBY PRO LOGIC et DOLBY 3 STEREO.....	47
Mode HALL .....	47
Durée de retard.....	48
Lecture de son Surround .....	48
Surround DOLBY PRO LOGIC.....	48
Surround DOLBY 3 STEREO .....	48
Surround HALL .....	49
<b>FONCTION DE SOUTIEN DE LA MEMOIRE</b> .....	<b>49</b>
<b>FONCTIONNEMENT TELECOMMANDE D'UNE CHAÎNE TEAC</b> .....	<b>50</b>
En utilisant un lecteur CD et une platine à cassette avec une fenêtre REMOTE SENSOR.....	50
En utilisant une platine à cassette sans fenêtre REMOTE SENSOR.....	51
Touches pour le fonctionnement d'autres appareils TEAC .....	52
<b>EN CAS DE DIFFICULTES</b> .....	<b>53</b>
<b>CARACTERISTIQUES TECHNIQUES</b> .....	<b>55</b>

## PRECAUTIONS

### Mise en place de l'appareil

Comme l'appareil incorpore un amplificateur puissant, il se dégage de la chaleur par l'arrière et le haut de l'appareil; l'endroit où l'appareil est à installer doit être bien ventilé. Eviter de l'installer là où il pourrait être exposé à des températures élevées, au soleil, à la poussière. Si les cordons de raccordement sont trop longs, en particulier les câbles des haut-parleurs, le son peut être dégradé. Laisser les cordons de raccordement aussi courts que possible.

### Pour le CANADA

#### CORDON DE CONNEXION CA

##### ATTENTION:

POUR ÉVITER LES CHOCs ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

### Pour le CANADA

LE PRESENT APPAREIL NUMERIQUE N'EMET PAS DE BRUITS RADIOELECTRIQUES DEPASSANT LES LIMITES APPLICABLES AUX APPAREILS NUMERIQUEs DE CLASSE B PRESCRITES DANS LE REGLEMENT SUR LE BROUILLAGE RADIOELECTRIQUE EDICTE PAR LE MINISTERE DES COMMUNICATIONS DU CANADA.

# RACCORDEMENTS


- Ne pas brancher les cordons d'alimentation de n'importe quel appareil sur les prises secteur et ne pas mettre leur interrupteurs d'alimentation (POWER) sur marche tant que tous les raccordements ne sont pas terminés.

## Raccordements de système


Se reporter à "Raccordements d'antenne" aux pages 32 - 34.

Prises secteur CA:  
Deux commutées, total 100 W ou 1 A (Etats-Unis/Canada)  
Une commutée, total 100 W (Europe/Exportation générale)


Se reporter à "FONCTIONNEMENT TELECOMMANDE D'UNE CHAÎNE TEAC" aux pages 50 et 51.

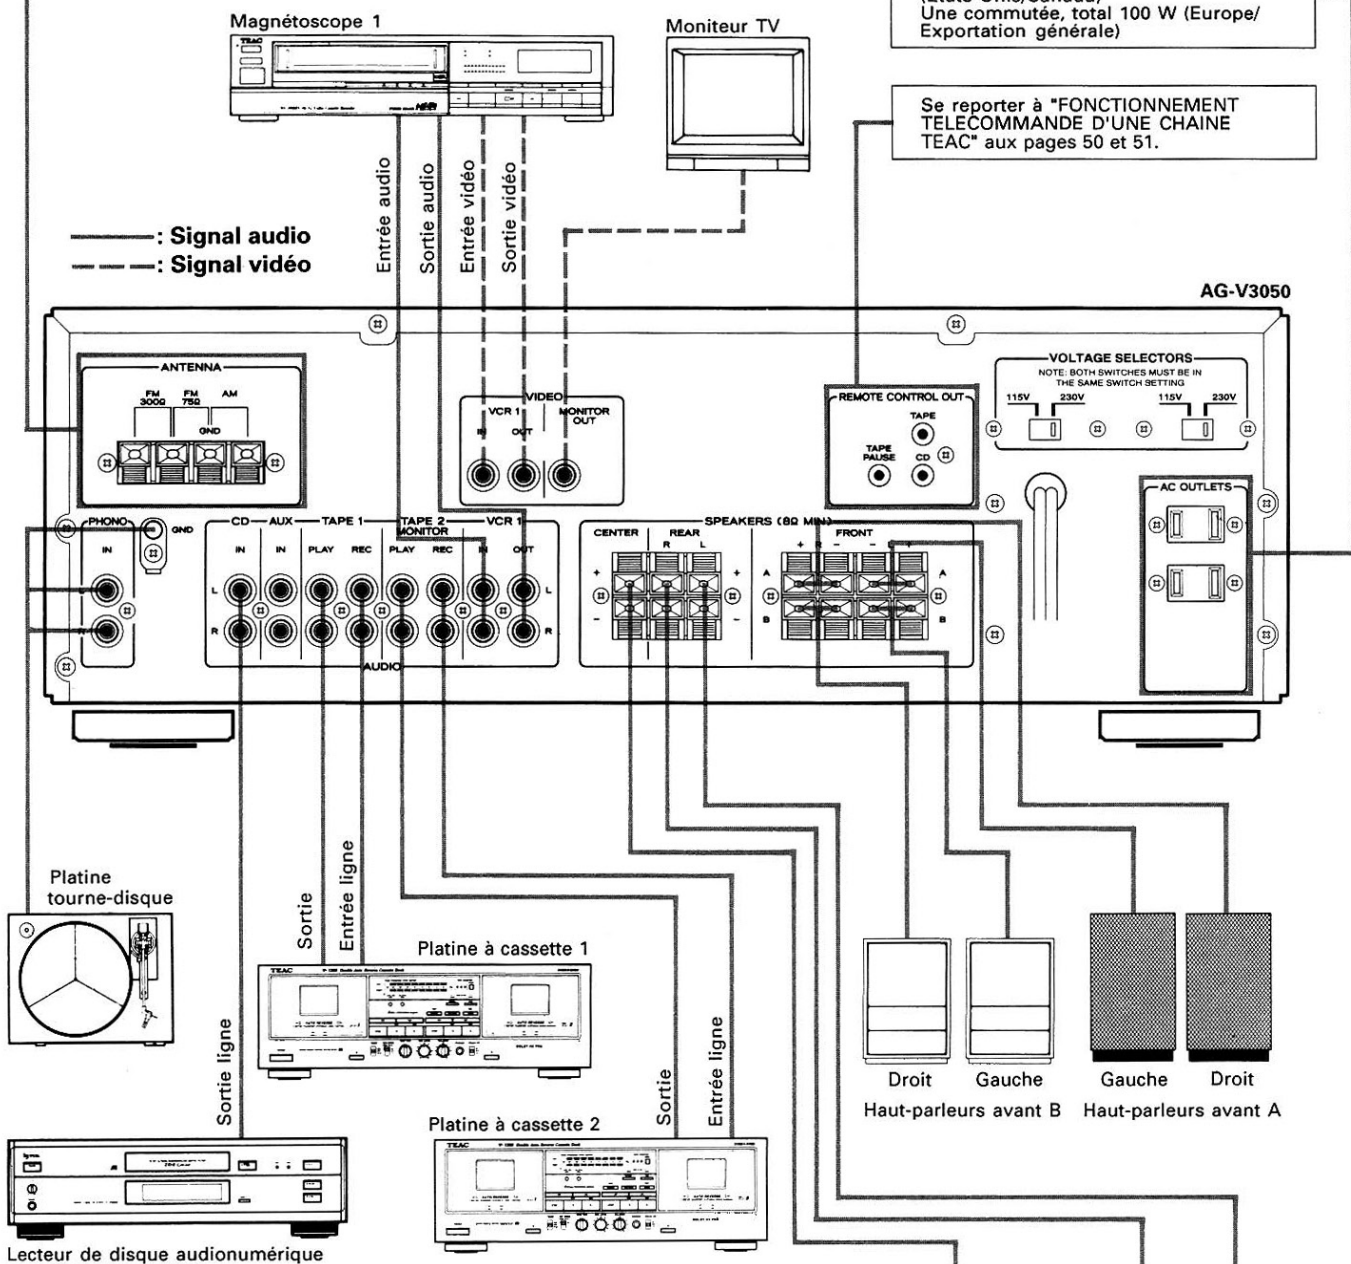

### Cordons de raccordement audio

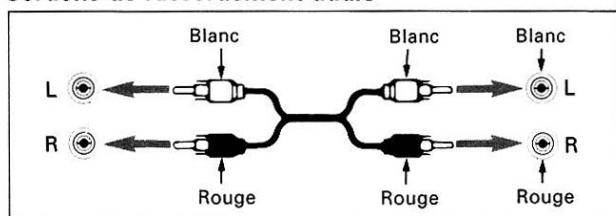


## Prises d'entrée magnétoscope 2 (VCR 2 INPUT)

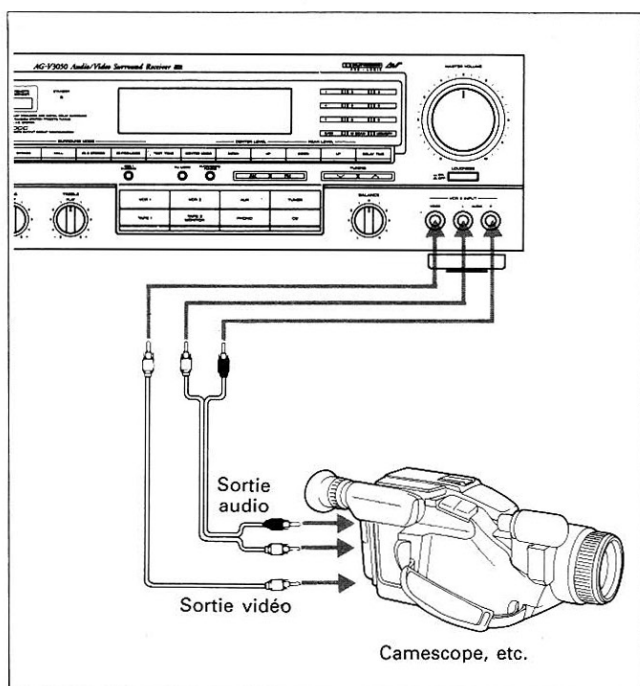


## Raccordements d'antenne

### Antenne FM (Etats-Unis/Canada/ Exportation générale)

Dans une région avec des signaux FM puissants, l'antenne de type "T" fournie est suffisante. L'étendre en forme de "T" et brancher les deux fils à la base du "T" aux bornes d'antenne comme montré. Pour des détails sur la façon de raccorder les fils d'antenne aux bornes, voir l'illustration. Étendre le haut du "T" et fixer avec des punaises, etc. à un mur ou un cadre de fenêtre, pour la meilleure réception possible.

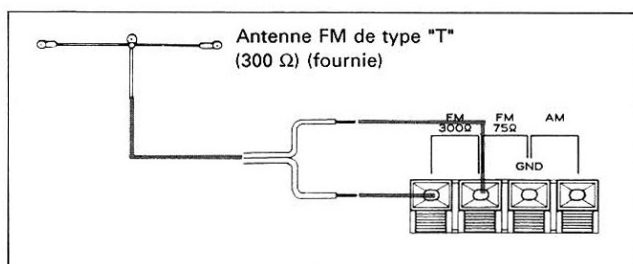


### Comment raccorder l'antenne

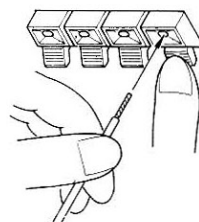

Pousser sur le levier et introduire l'extrémité dénudée du fil dans le bon trou puis relâcher le levier pour que le fil soit bien maintenu en place.

Dans une région où les signaux FM sont faibles, il peut être nécessaire d'utiliser une antenne FM externe asymétrique 75 ohms. Une antenne à 3 éléments est généralement suffisante; si vous habitez dans une région où les signaux FM sont particulièrement faibles, il peut être nécessaire d'utiliser une antenne à 5 éléments ou plus. Les antennes 75 ohms utilisent un câble coaxial et doivent être raccordées comme suit: d'abord dénuder le revêtement du câble, puis torsader le fil de blindage pour que l'âme et le blindage puissent être raccordés comme montré.

### Antenne FM extérieure (75 Ω)

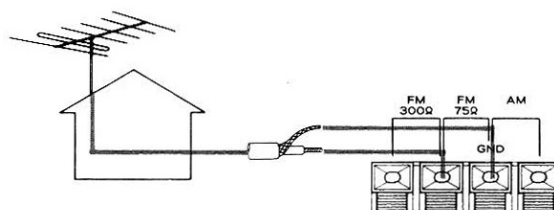





## Antenne FM (Europe)

Les modèles pour l'Europe sont conçus pour le raccordement d'une antenne FM externe asymétrique 75 ohms en utilisant le transformateur d'adaptation fourni comme montré. Une antenne à 3 éléments est généralement suffisante; si vous habitez dans une région où les signaux FM sont particulièrement faibles, il peut être nécessaire d'utiliser une antenne à 5 éléments ou plus.

Raccorder le câble coaxial de l'antenne au transformateur d'adaptation comme montré. Après avoir terminé le raccordement, brancher le transformateur à la prise "FM 75Ω".

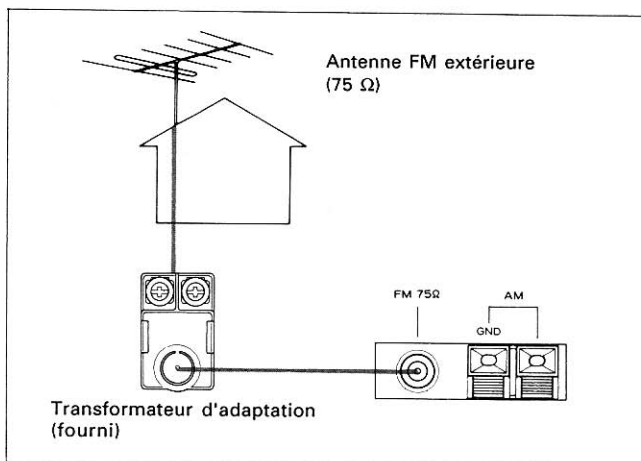

Si vous vivez relativement près d'un émetteur et voulez utiliser l'antenne FM de type "T" fournie, vous devez la brancher au transformateur d'adaptation fourni. Raccorder les fils à la base du "T" aux bornes du transformateur d'adaptation comme montré. Brancher le transformateur à la prise "FM 75Ω", étendre le haut du "T" et fixer avec des punaises à un mur ou un cadre de fenêtre, où la réception est la meilleure.

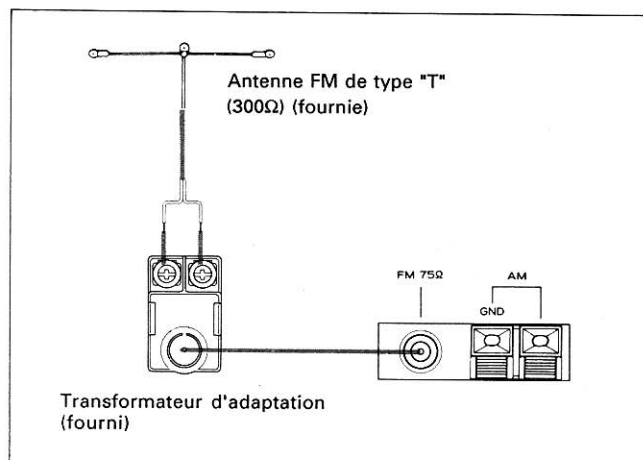


## Comment raccorder un câble coaxial au transformateur d'adaptation


- ① Dénuder le câble comme montré ci-dessous.



Dénuder le revêtement extérieur.




Retourner le blindage sur le revêtement.




Dénuder l'âme.

- ② Retirer le capot en poussant les pièces latérales vers l'extérieur avec vos ongles.

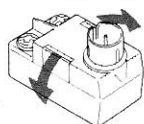

- ③ Introduire l'âme dans la fente dans l'ergot métallique comme montré en A. Replier les griffes métalliques avec des pinces, etc. pour qu'elles tiennent la partie du blindage. Remettre le capot.


Griffes métalliques



## Antenne AM


### ■ Antenne cadre AM

Une antenne cadre AM à haute performance est fournie avec le récepteur et c'est suffisant pour une bonne réception dans la plupart des régions. Brancher les fils de l'antenne cadre aux bornes d'antenne AM comme montré. Pour des détails sur le raccordement des fils d'antenne aux bornes, voir "Comment raccorder l'antenne" à la page 32. Placer l'antenne sur une étagère, par exemple, ou le fixer à un cadre de fenêtre, etc., dans la direction qui donne la meilleure réception et aussi loin que possible de la chaîne, des cordons de haut-parleur et du cordon d'alimentation pour éviter des parasites.

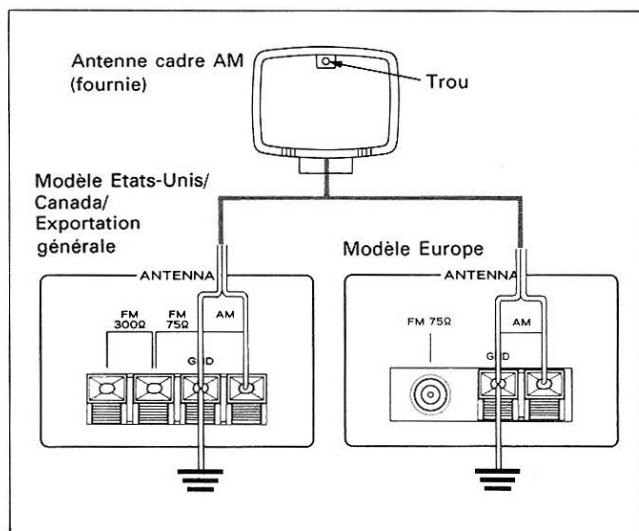


### Réglage d'antenne cadre AM

#### Sur une étagère, etc.

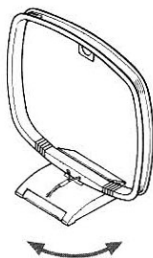

Trouver la direction dans laquelle la réception est la meilleure.

#### Sur un cadre de fenêtre, etc.

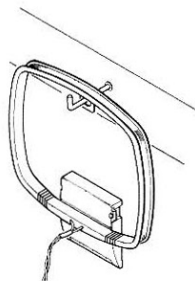


Pendre dans la direction qui donne la meilleure réception.

### ■ Antenne AM extérieure

Si vous avez des difficultés pour recevoir clairement des émissions AM avec l'antenne cadre AM (parce que vous êtes trop loin de l'émetteur ou dans un immeuble en béton, etc.), il peut être nécessaire d'utiliser une antenne AM extérieure. Utiliser un fil électrique isolé plus long que 5 mètres, dénuder une de ces extrémités, et la raccorder à la borne indiquée. Le fil d'antenne doit être placé à l'extérieur ou en intérieur près d'une fenêtre. Pour une meilleure réception, raccorder la borne de masse GND à une bonne terre.

**Remarque:** Même en utilisant une antenne AM extérieure, ne pas débrancher l'antenne cadre AM.

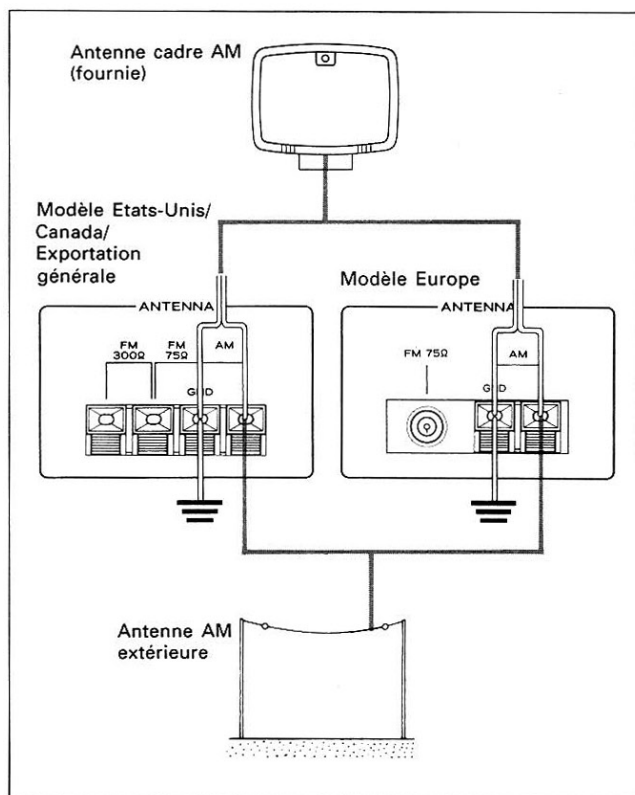

## Raccordements de haut-parleur

### Précaution:


Pour éviter d'endommager les haut-parleurs en entrant un signal soudain de haut niveau, bien couper l'alimentation avant de brancher les haut-parleurs.

Raccorder chaque haut-parleur aux bornes de haut-parleur correspondantes, comme voulu. Pour "Installation des haut-parleurs" se reporter à la page 47.

### Remarques:

- En utilisant les haut-parleurs arrières, s'assurer de bien les raccorder aux deux canaux (L et R). Si un haut-parleur est raccordé à seulement un canal, le son ne sortira pas.
- Utiliser des haut-parleurs avec une impédance nominale de 8 ohms ou plus.



Raccorder les cordons de haut-parleur aux bornes de haut-parleur comme montré dans l'illustration suivante.

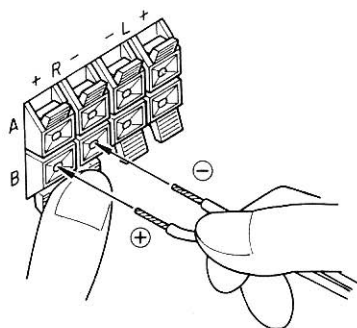


Appuyer sur le levier, introduire l'extrémité dénudée des fils, puis relâcher le levier pour que les fils soient bien maintenus en place.

# COMMANDES ET INDICATEURS

## ■ Panneau avant

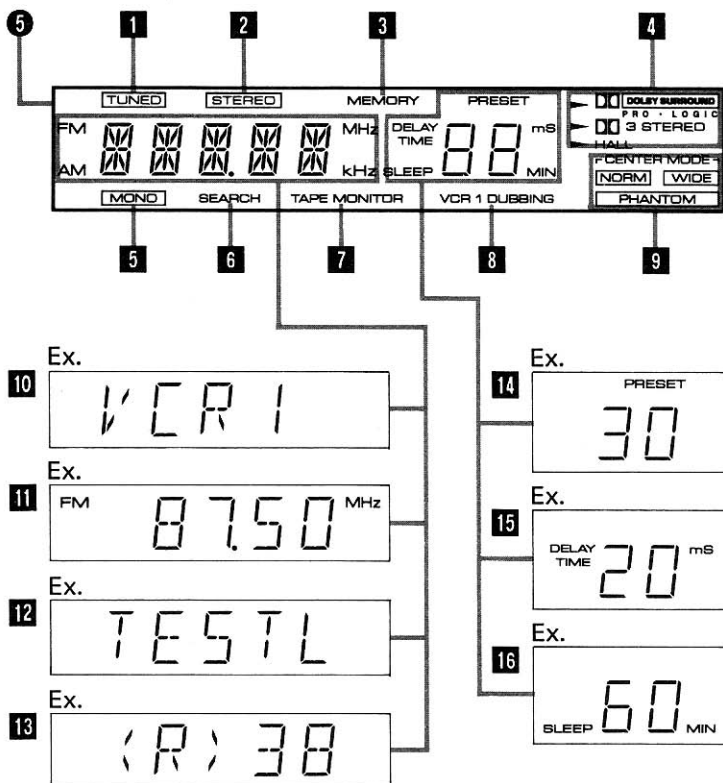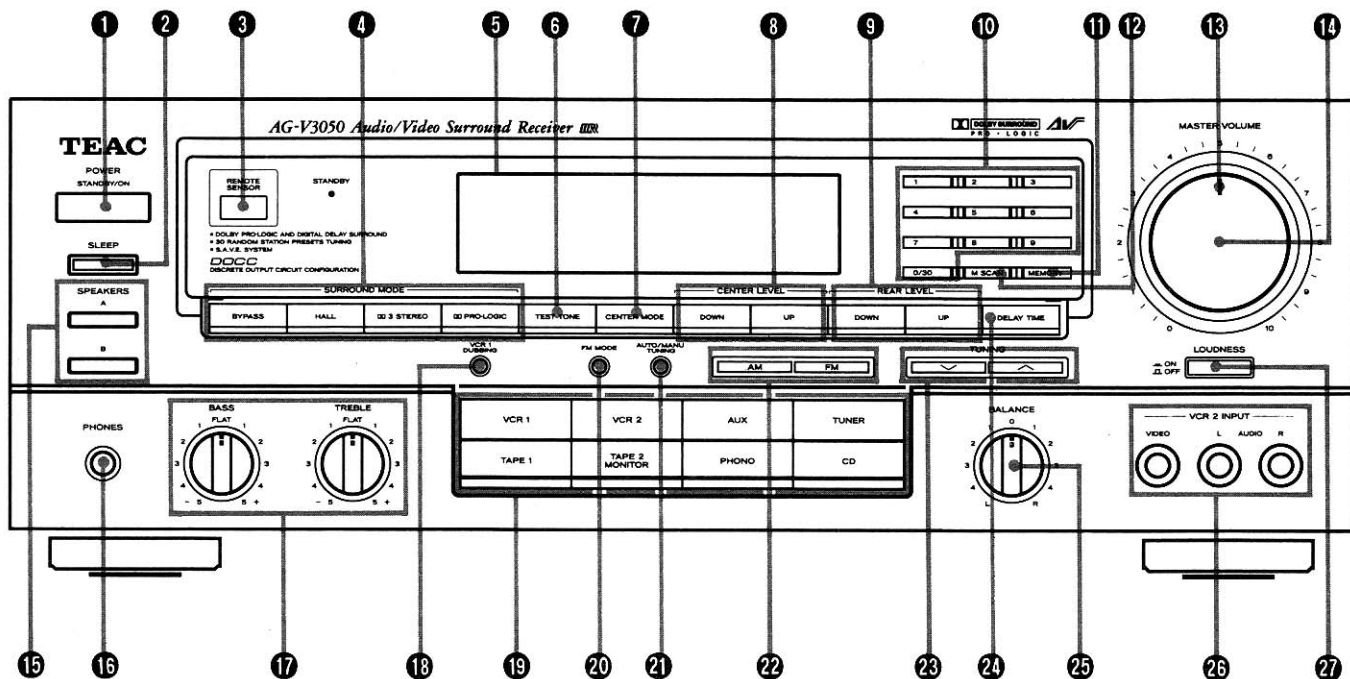

## ■ Boîtier de télécommande (UR-405)

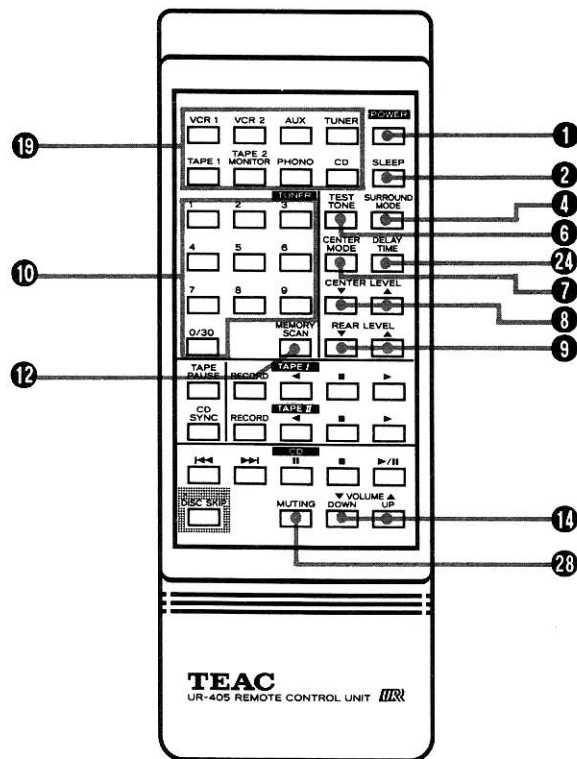

\* Pour les touches de la télécommande qui ne sont pas numérotées, se reporter à la page 52.

- 1 Touche d'alimentation (POWER)
- 2 Touche de sommeil (SLEEP)
- 3 Fenêtre de réception du signal infrarouge de la télécommande (REMOTE SENSOR)
- 4 Touche(s) de MODE SURROUND
- 5 Fenêtre d'affichage à fonctions multiples
- 6 Touche de tonalité test (TEST TONE)
- 7 Touche de mode central (CENTER MODE)
- 8 Touches de niveau central (CENTER LEVEL DOWN/UP)
- 9 Touches de niveau arrière (REAR LEVEL DOWN/UP)
- 10 Touches numériques
- 11 Touche de mémoire (MEMORY)
- 12 Touche de balayage mémoire (M SCAN (MEMORY SCAN))
- 13 Indicateur de niveau de volume général (MASTER VOLUME)
- 14 Commande de volume (VOLUME) (Touches VOLUME DOWN/UP)
- 15 Touche de sélection de haut-parleurs (SPEAKERS)
- 16 Prise de casque d'écoute (PHONES)
- 17 Commandes BASS et TREBLE
- 18 Touche de copie VCR 1 DUBBING
- 19 Touches de sélection de source
- 20 Touche de mode FM (FM MODE)
- 21 Touche AUTO/MANU TUNING
- 22 Touches de sélection AM/FM
- 23 Touches de syntonisation TUNING DOWN/UP
- 24 Touche de durée de retard (DELAY TIME)
- 25 Commande de balance (BALANCE)
- 26 Prise d'entrée magnétoscope 2 (VCR 2 INPUT)
- 27 Commande de contour (LOUDNESS)
- 28 Touche MUTING

- 1 Indicateur TUNED
- 2 Indicateur STEREO
- 3 Indicateur MEMORY
- 4 Indicateurs de mode Surround
- 5 Indicateur MONO
- 6 Indicateur SEARCH
- 7 Indicateur TAPE MONITOR
- 8 Indicateur de copie (VCR1 DUBBING)
- 9 Indicateurs de mode central (CENTER MODE)
- 10 Affichage de la source
- 11 Affichage de la gamme/fréquence
- 12 Affichage de tonalité test
- 13 Affichage du niveau central/niveau arrière
- 14 Affichage de canal pré-réglé (PRESET)
- 15 Affichage de la durée de retard (DELAY TIME)
- 16 Affichage de durée de sommeil (SLEEP)


En utilisant la télécommande UR-405 fournie, le récepteur AG-V3050 et certains autres appareils TEAC utilisés avec peuvent être commandés à partir de votre position d'écoute.

La télécommande d'autres appareils TEAC en utilisant l'UR-405 est expliquée après, à la page 50.


## Piles

### Mise en place des piles


1. Retirer le couvercle du compartiment des piles de la télécommande, comme montré dans la figure.  
Pousser la languette ① dans le sens de la flèche, puis lever le couvercle ② pour le sortir.

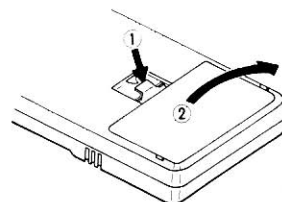

2. Introduire deux piles "SUM-3", "AA" ou "R6". S'assurer que les piles sont installées avec leurs polarités placées correctement, en suivant les marquages dans le compartiment des piles comme montré ci-dessous.

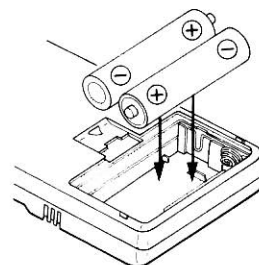

3. Remettre le couvercle. Introduire les deux languettes ① dans les fentes, puis presser le couvercle dans le sens de la flèche ② pour le remettre en place.

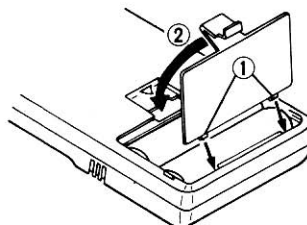

## Remplacement des piles


Si vous remarquez que la distance entre la télécommande et le récepteur pour un fonctionnement correct devient plus courte, cela indique que les piles sont presque usées. Dans ce cas, remplacer les deux piles par des nouvelles.

## Précautions concernant les piles

- Bien introduire les piles avec les polarités correctes positive (+) et négative (-) comme indiqué dans le compartiment des piles.
- Ne pas utiliser une pile usée avec une pile neuve en même temps.
- Utiliser des piles du même type. Ne jamais utiliser ensemble des piles de types différents, même si elles ont la même forme.
- Des batteries ou des piles peuvent être utilisées. Se reporter aux précautions sur leurs étiquettes avant utilisation.
- Ne jamais chauffer ou démonter des piles et ne jamais jeter des piles usagées au feu, elles pourraient exploser.

## Utilisation de la télécommande

Pour utiliser la télécommande UR-405, la diriger vers la fenêtre REMOTE SENSOR du récepteur (ou d'un autre appareil TEAC) dans la gamme montrée.

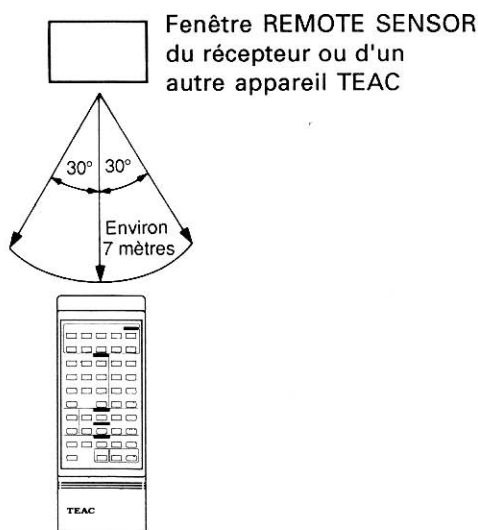

Certaines touches sur l'UR-405 et sur le panneau avant de l'AG-V3050 ont les mêmes ou des fonctions similaires et ont les mêmes numéros de référence. Elles sont montrées à la page 36.

Les touches sans numéros sont pour le fonctionnement d'autres appareils TEAC. Pour ces touches, se reporter à la page 52.

## Précautions sur l'utilisation de la télécommande

- Même si la télécommande est utilisée dans la gamme montrée, le fonctionnement télécommandé peut être impossible s'il y a un obstacle entre le récepteur et la télécommande.
- Si vous avez d'autres appareils commandés par des signaux infrarouges dans la même pièce que votre AG-V3050, ils peuvent ne pas fonctionner correctement à cause des signaux de la télécommande. (TEAC ne peut être pris pour responsable de dommages causés par incident ou en conséquence de ce phénomène.) A l'inverse, leurs télécommandes peuvent causer un mauvais fonctionnement de l'AG-V3050.
- Placer des livres ou d'autres objets sur le boîtier de télécommande pourrait appuyer sur des touches et user les piles.
- Si la télécommande n'est pas à utiliser pendant plus d'un mois, retirer les piles pour éviter des fuites. Si une fuite a eu lieu, essuyer le liquide dans le compartiment et remplacer les piles par des neuves.



# FONCTIONNEMENT AUDIO

## Remarque:

Les points suivants s'appliquent à toutes les sections "FONCTIONNEMENT AUDIO et VIDEO" sauf indications contraires.

- Pour simplifier les explications, les instructions utilisent les noms des touches et commandes sur le panneau avant, sans mentionner l'utilisation de la télécommande.
- Bien s'assurer que la touche TAPE 2 MONITOR est réglée sur OFF (l'indicateur TAPE MONITOR n'apparaît pas dans l'affichage). Cette instruction ne sera plus répétée par la suite.


## Fonction de minuterie de sommeil (SLEEP)

Cette fonction vous permet de programmer l'AG-V3050 pour qu'il coupe automatiquement sa propre alimentation. Vous pouvez par conséquent profiter de la chaîne audio/vidéo pour la durée spécifiée sans avoir à vous soucier de sa coupure plus tard. Pour engager la minuterie SLEEP, appuyer sur la touche SLEEP (2) jusqu'à ce que la durée de maintien en marche voulue soit affichée. La durée, affichée en minutes (MIN), change, comme montré ci-dessous, chaque fois que la touche est pressée.

Pas d'affichage → 10 → 20 → 30 → 60 → 90


L'affichage de la durée SLEEP décompte minute par minute jusqu'à ce que la durée pré-réglée soit écoulée, à ce moment là, l'alimentation est coupée automatiquement.

## Fonctionnement de base

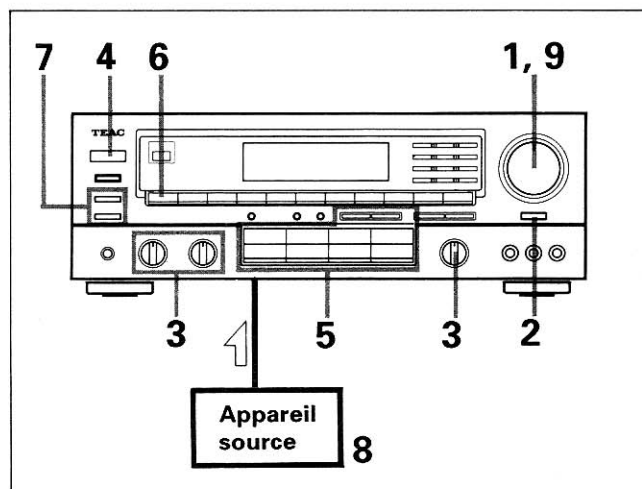

1. Régler la commande MASTER VOLUME sur "0". C'est pour protéger les haut-parleurs d'un signal soudain de haut niveau.
2. Régler la touche LOUDNESS sur la position OFF.
3. Régler les commandes BASS, TREBLE et BALANCE sur leurs positions centrales (à dé clic).
4. Appuyer sur la touche POWER pour mettre l'alimentation.
5. Sélectionner la source voulue en appuyant sur une des touches de sélection de source (comprenant les touches AM et FM). Pour écouter une source autre que la platine à cassette 2, vérifier que l'indicateur TAPE MONITOR n'est pas montré dans l'affichage; s'il l'est, le commuter en appuyant sur la touche TAPE 2 MONITOR.
6. Appuyer sur la touche BYPASS pour mettre le mode Surround à l'arrêt.
7. Sélectionner les haut-parleurs avant à utiliser avec les touches de sélection SPEAKERS. Pour des détails, se reporter à "Touches de sélection SPEAKERS" dans la section suivante.
8. Lancer la lecture de l'appareil source.
9. Augmenter progressivement le volume avec la commande MASTER VOLUME et ajuster les autres commandes comme requis.

## Réglages audio

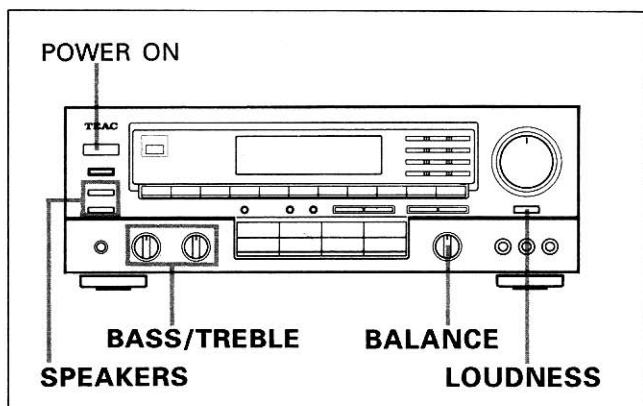

### Touches de sélection SPEAKERS ⑮

Lorsque la touche A et/ou B est pressée, le son sera entendu des haut-parleurs raccordés aux bornes SPEAKERS A et/ou B du panneau arrière.

#### Remarque:

Si les deux touches de sélection SPEAKERS A et B sont pressées avec des haut-parleurs branchés seulement aux bornes SPEAKERS A ou SPEAKERS B, aucun son ne sera entendu des haut-parleurs. Si des haut-parleurs ne sont pas raccordés à une paire de bornes, laisser la touche correspondant à la paire de bornes inutilisée réglée sur OFF.

### Commandes de tonalité (BASS et TREBLE) ⑰

Elles sont utilisées pour relever ou atténuer les fréquences basses et élevées. La réponse sera "plate" avec les commandes dans leurs positions centrales "à déclic".

### Commande BALANCE ②⑤

Elle décale le son vers le haut-parleur de gauche ou de droite.

### Touche LOUDNESS ②⑦


Cette touche compense la réponse non linéaire de l'oreille humaine à faibles niveaux. Régler ce commutateur sur la position OFF en écoutant à des niveaux normaux.

### Touche MUTING (TELECOMMANDE) ②⑧

La presser pour rendre silencieux le son des haut-parleurs et du casque, pour répondre au téléphone, etc. Pour revenir au volume original, appuyer à nouveau sur la touche MUTING. Alors que le silencieux est engagé, l'indicateur de niveau MASTER VOLUME clignotera.

## Réception de la radio

### Syntonisation automatique

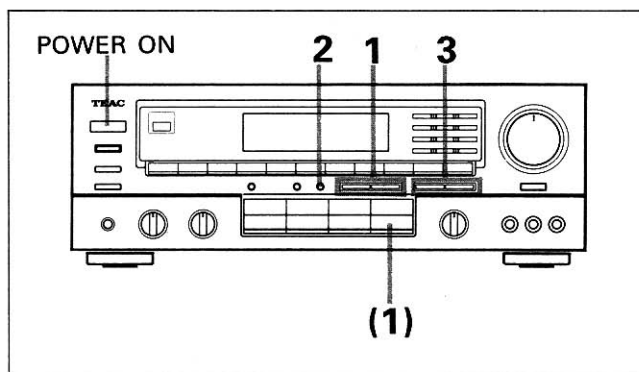

1. Appuyer sur la touche AM ou FM\*.  
\* La touche TUNER peut également être pressée quand vous voulez écouter la station sélectionnée en dernier en changeant de source.
2. Appuyer sur la touche AUTO/MANU TUNING pour que l'indicateur SEARCH apparaisse dans l'affichage.
3. Appuyer sur la touche UP ou DOWN TUNING. La station suivante diffusant sur une fréquence plus élevée ou plus faible est automatiquement détectée et syntonisée.

### ● Touche FM MODE (②⑩)

Une pression sur cette touche fait alterner entre le mode Stéréo et le mode Mono. (L'indicateur MONO s'allume).

#### Stéréo

Les émissions stéréo FM sont reçues en stéréo et l'indicateur STEREO est allumé dans l'affichage. Les émissions monophoniques sont reçues en mono.

Si des émissions FM avec un signal faible sont reçues, la fonction de silencieux FM est activée automatiquement pour couper les signaux, éliminant du bruit parasite.

#### Mono


Pour compenser la réception stéréo FM médiocre, sélectionner ce mode. La réception sera alors forcée en monophonique, réduisant des parasites indésirables.

### ● Indicateur de syntonisation TUNED (⑤'s ①)

"TUNED" apparaît dans l'affichage quand une émission est correctement syntonisée.

## Syntonisation manuelle

La syntonisation manuelle est généralement utilisée pour syntoniser des stations diffusant un signal trop faible pour être reçues par la syntonisation automatique.

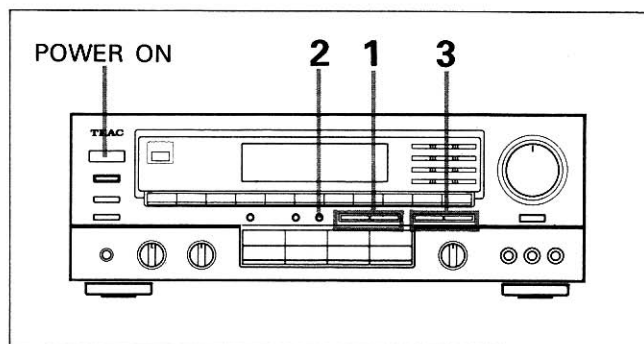

1. Appuyer sur la touche AM ou FM.
2. Appuyer sur la touche AUTO/MANU TUNING pour que l'indicateur SEARCH n'apparaisse pas dans l'affichage.
3. Lorsque la touche UP ou DOWN TUNING est pressée momentanément, la fréquence est changée d'un palier fixe (voir PALIERS ci-dessous). Si la touche de syntonisation est maintenue pressée pendant plus de 0,5 seconde, la fréquence change en continu jusqu'au relâchement de la touche.

### PALIERS

#### Modèles pour Etats-Unis/Canada

FM: paliers de 100 kHz

AM: paliers de 10 kHz

#### Modèles pour Europe/Exportation générale


FM: paliers de 50 kHz

AM: paliers de 9 kHz

## Syntonisation préréglée

L'AG-V3050 dispose d'une mémoire pour 30 stations préréglées. Si des fréquences d'émissions sont mises dans cette mémoire, elles peuvent être syntonisées par une procédure simplifiée.


### ■ Préréglage

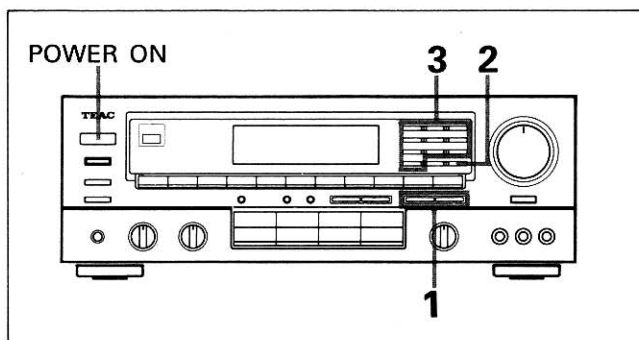

1. Syntoniser une station en utilisant le mode de syntonisation automatique ou manuelle.
2. Appuyer sur la touche MEMORY; l'indicateur MEMORY clignotera dans l'affichage pour environ 5 secondes.
3. Alors que l'indicateur MEMORY clignote, appuyer sur les touches numériques pour affecter le canal sous lequel les informations (gamme FM ou AM et fréquence) pour l'émission sont mises en mémoire.


**Remarque:** Si une fréquence a déjà été rangée dans le canal spécifié, la fréquence stockée précédemment sera remplacée par la nouvelle fréquence.

#### Ex.: Canal 1

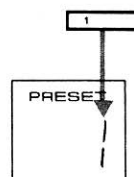


**Remarque:** Après la programmation du canal préregré 1 ou 2, attendre que l'indication MEMORY disparaisse avant d'effectuer une autre fonction.


#### Ex.: Canal 15

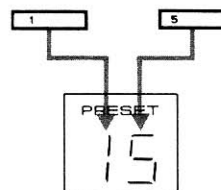

Ex.: Canal 20

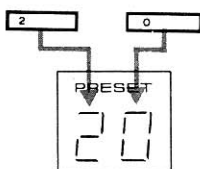

Ex.: Canal 30

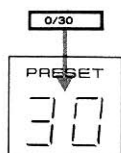

4. Pour relâcher la fonction mémoire alors que l'indicateur MEMORY clignote dans l'affichage, appuyer sur la touche UP ou DOWN TUNING.

### ■ Rappel des fréquences


Appuyer sur les touches numériques correspondant au numéro de canal pour syntoniser directement une émission.

**Remarque:** Après le rappel du canal préréglé 1 ou 2, attendre que la gamme et la valeur de la fréquence mémorisées apparaisse dans l'affichage avant d'effectuer une autre fonction.

### ■ Utilisation de la fonction de balayage de la mémoire

Quand la touche M. SCAN (12) est pressée, les canaux préréglés dans lesquels des données (gammes et fréquences) ont été mémorisées seront balayés à des intervalles de 5 secondes dans l'ordre numérique des canaux préréglés. Quand vous entendez l'émission que vous voulez écouter, relâcher la fonction de balayage de la mémoire en appuyant à nouveau sur la touche M. SCAN.

## Ecoute de disques ou de disques audio numériques

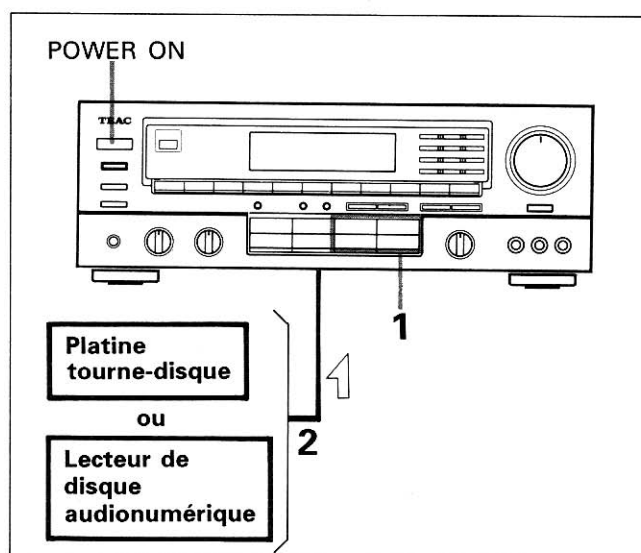


1. Appuyer sur la touche PHONO ou CD.
2. Faire fonctionner la platine tourne-disque (avec une cartouche à aimant mobile) ou le lecteur de disque audio numérique.

## Lecture de cassettes

### Remarque:

Si deux platines à cassette TEAC sont utilisées dans la chaîne, l'utilisation de la télécommande UR-405 peut faire fonctionner les deux platines simultanément.

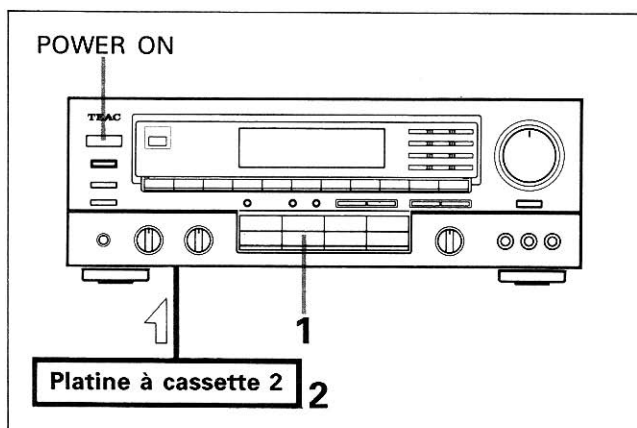

1. Placer la touche TAPE 2 MONITOR sur ON; l'indicateur TAPE MONITOR apparaîtra dans l'affichage.
2. Faire fonctionner la platine à cassette 2 pour la lecture.

### ■ Lecture de la platine à cassette 1


Pour la lecture en utilisant la platine à cassette 1, régler la touche TAPE 2 MONITOR sur OFF puis appuyer sur la touche TAPE 1. Puis faire fonctionner la platine à cassette 1 pour la lecture.

## Enregistrement de cassettes

### Remarque:

Si deux platines à cassette TEAC sont utilisées dans la chaîne, l'utilisation de la télécommande UR-405 peut faire fonctionner les deux platines simultanément.

## Enregistrement d'une source autre qu'une bande

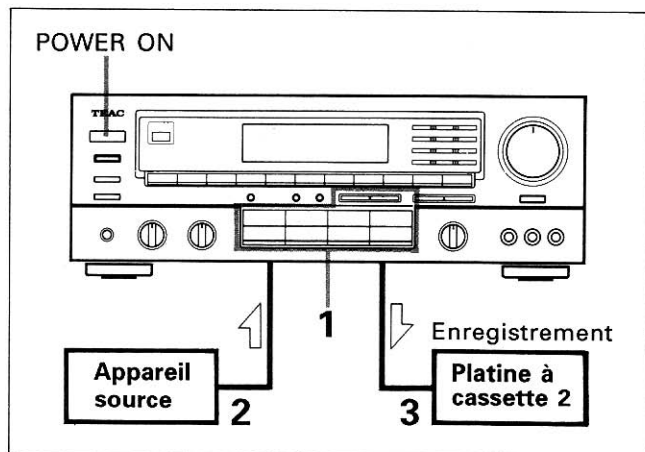

1. S'assurer que la touche TAPE 2 MONITOR est réglée sur OFF, puis appuyer sur la touche de sélection de source (comprenant les touches AM/FM) correspondant à la source à enregistrer.
2. Lire la source.
3. Faire fonctionner la platine à cassette 2 pour l'enregistrement.


### ■ Contrôle de l'enregistrement

Si la platine à cassette 2 a des têtes d'enregistrement et de lecture séparées, le son enregistré peut être entendu, pendant l'enregistrement, à partir des haut-parleurs avec la touche TAPE 2 MONITOR réglée sur ON.

### ■ Enregistrement simultané

Une source unique peut être enregistrée simultanément par les platines à cassette 1 et 2. Pour faire cela, après l'étape 2 ci-dessus, faire fonctionner les deux platines pour l'enregistrement.

## Copie de bande (de la platine 1 vers la platine 2)

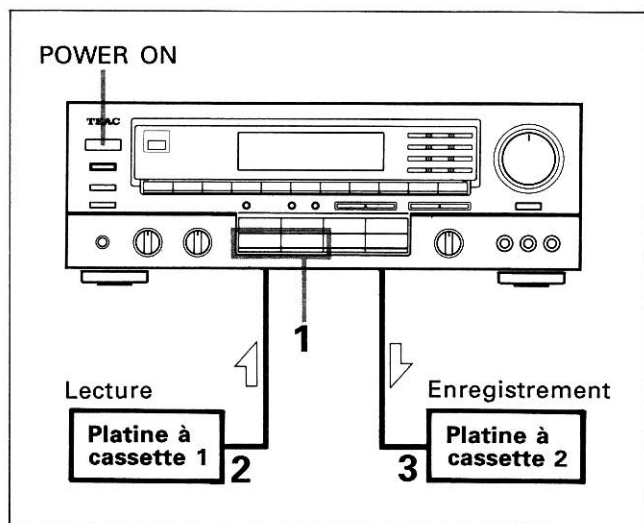

1. S'assurer que la touche TAPE 2 MONITOR est réglée sur OFF, puis appuyer sur la touche TAPE 1.
2. Faire la lecture sur la platine à cassette 1.
3. Faire fonctionner la platine à cassette 2 pour l'enregistrement.

### ■ Contrôle de l'enregistrement


Si la platine à cassette 2 (la platine utilisée pour l'enregistrement) a des têtes d'enregistrement et de lecture séparées, le son enregistré peut être entendu, pendant la copie, à partir des haut-parleurs avec la touche TAPE 2 MONITOR réglée sur ON.

# 

## Lecture de sources vidéo

### Remarque:


Pour lire des programmes vidéo utilisant une certaine fonction d'effet Surround, se reporter à la section EFFETS SURROUND.

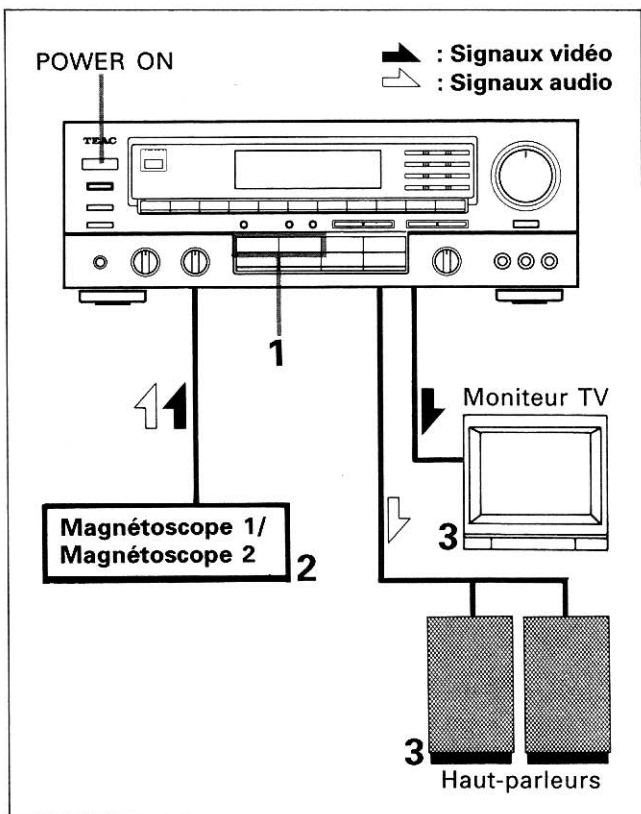

1. Appuyer sur la touche VCR 1 ou VCR 2.
2. Lire la source vidéo correspondant à la touche sélectionnée.
3. L'image de la source vidéo peut être vue sur le téléviseur et le son de la source vidéo peut être écouté à partir des haut-parleurs.

## Enregistrement avec une platine vidéo

### Copie de bande (du magnétoscope 2 vers le magnétoscope 1)

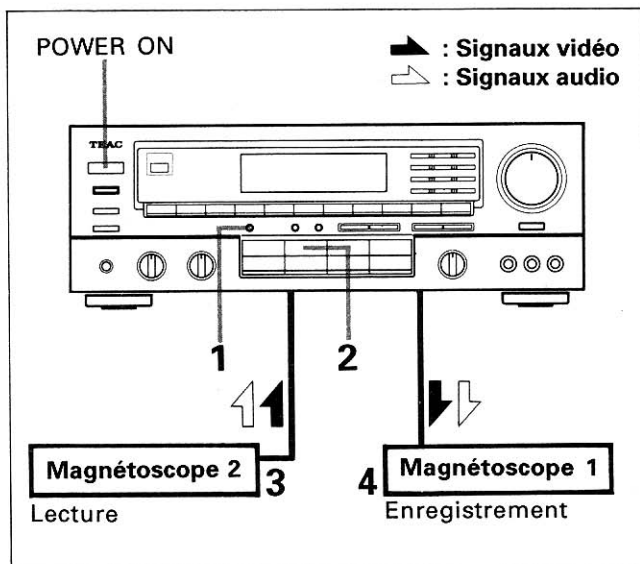


1. Appuyer sur la touche VCR 1 DUBBING pour que l'indicateur VCR 1 DUBBING apparaisse dans l'affichage.
2. Appuyer sur la touche VCR 2 avec la touche TAPE 2 MONITOR réglée sur OFF.
3. Faire fonctionner le magnétoscope 2 pour la lecture.
4. Faire fonctionner le magnétoscope 1 pour l'enregistrement. Ainsi les signaux vidéo/audio du magnétoscope 2 peuvent être copiés sur le magnétoscope 1.



## Fonction S.A.V.E (Second Audio Source for Video Editing) SYSTEM


Cette fonction vous permet de remplacer le son d'un magnétoscope par le son d'une source AUDIO tel un lecteur CD pendant la copie du signal vidéo.

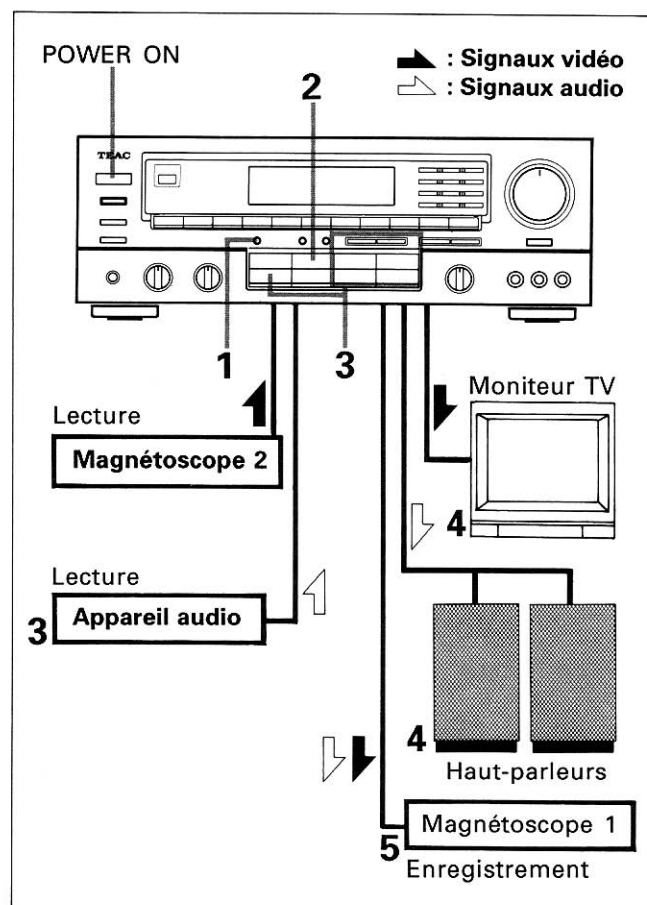

1. S'assurer que la touche VCR 1 DUBBING est réglée sur OFF.
2. Appuyer sur la touche VCR 2 et faire fonctionner le magnétoscope 2 pour la lecture.
3. Sélectionner la source audio avec les touches de sélection de source (comprenant les touches AM/FM et excluant la touche TAPE 2 MONITOR), puis faire fonctionner l'appareil audio sélectionné pour la lecture.
4. Vous pouvez alors regarder l'image de l'appareil vidéo sur le téléviseur, et écouter le son de l'appareil audio à travers les haut-parleurs.  
**Remarque:** Bien observer l'ordre des étapes 2 et 3.
5. Faire fonctionner le magnétoscope 1 pour l'enregistrement. Ainsi le fonctionnement S.A.V.E. sera effectué.

## Fonction d'enregistrement A/V indépendant

Tout en écoutant réellement du son, vous pouvez effectuer une copie vidéo de façon indépendante.

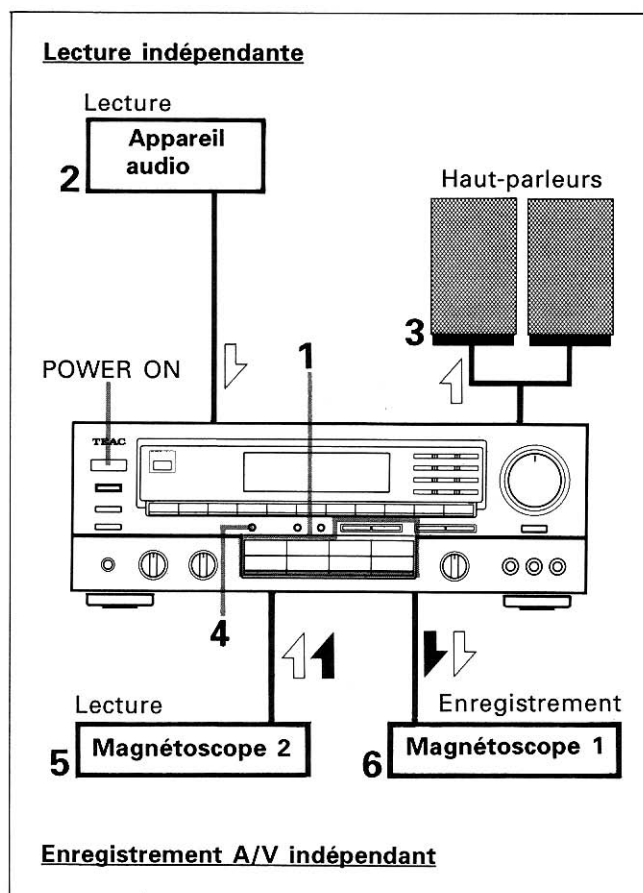


1. Avec les touches de sélection de source (comprenant les touches AM/FM), sélectionner la source programme que vous voulez réellement écouter.
2. Faire la lecture sur l'appareil correspondant à la touche pressée précédemment.
3. Vous pouvez alors écouter la source à travers les haut-parleurs.
4. Appuyer sur la touche VCR 1 DUBBING pour que l'indicateur VCR 1 DUBBING apparaisse dans l'affichage.
5. Faire fonctionner le magnétoscope 2 pour la lecture.
6. Faire fonctionner le magnétoscope 1 pour l'enregistrement. La fonction d'enregistrement A/V indépendant est alors effectuée.


# EFFETS SURROUND

L'AG-V3050 offre trois modes d'effet surround: deux pour des sources codées avec des informations Dolby Surround et une pour des sources qui ne disposent pas de ces informations codées.

## Modes Surround disponibles

### Surround DOLBY PRO LOGIC

Certains films sont codés en Dolby Surround; quand vous regardez ces films au cinéma, vous entendez le son de haut-parleurs placés devant et derrière, offrant un effet de "son Surround" unique. Par exemple, il peut créer l'effet d'une voiture ou d'un avion se déplaçant de l'avant droit à l'arrière gauche de la salle. Plusieurs de ces films sont disponibles sur cassettes ou disques vidéo, et l'AG-V3050 peut recréer chez vous le même effet de son Surround que vous entendez dans les salles de cinéma. C'est une de ces principales caractéristiques, le rendant le récepteur idéal pour votre chaîne audio/vidéo à la maison. Pour profiter de l'effet Surround Dolby Pro Logic, vous devez installer une paire de haut-parleurs avant, un haut-parleur central et une paire de haut-parleurs arrières (L'installation détaillée des haut-parleurs est mentionnée après), et vous devez lire des sources vidéo portant la marque "  DOLBY SURROUND ".

\* Fabriqué sous licence de Dolby Laboratories Licensing Corporation. Licences supplémentaires sous un ou plusieurs des brevets suivants: Numéros Etats-Unis 3.632.886, 3.746.792 et 3.959.590; Numéros Canada 1.004.603 et 1.037.877. "Dolby" et symbole double D  sont des marques de Dolby Laboratories Licensing Corporation.

### Surround DOLBY 3 STEREO

Sélectionner ce mode à la place du mode Dolby Pro Logic pour profiter de l'effet Surround Dolby sans haut-parleurs arrières. Les haut-parleurs avant reçoivent les signaux des haut-parleurs (surround) arrières en plus des signaux des haut-parleurs avant. Le haut-parleur central fonctionne de la même façon que dans le mode Dolby Pro Logic. De cette façon, vous pouvez profiter d'un son de lecture ayant un meilleur positionnement du son.


### Surround HALL

Pour des sources vidéo non codées avec Dolby Surround, ce mode crée un effet Surround comprenant des réverbérations naturelles riches similaires à celles entendues dans une salle de concert.

### Sélection de l'effet Surround

L'effet Surround peut être sélectionné en appuyant sur une des quatre touches SURROUND MODE (④) du panneau avant (appuyer sur BYPASS quand vous n'avez pas besoin des effets Surround) ou en appuyant sur la touche SURROUND MODE (④) sur la télécommande jusqu'à l'apparition du mode Surround voulu dans l'affichage.





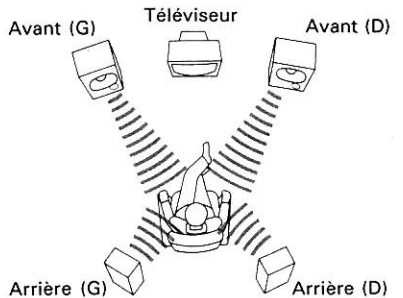
- Chaque fois que la touche SURROUND MODE sur la télécommande est pressée, le mode Surround change de façon cyclique, comme montré ci-dessous.

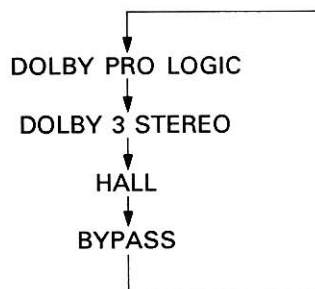


## Installation des haut-parleurs

Les tableaux ci-dessous montrent la disposition des haut-parleurs en fonction du mode Surround. Chaque installation est différente; placer les haut-parleurs où le son semble être le meilleur pour vous.

### Modes Surround DOLBY PRO LOGIC et DOLBY 3 STEREO

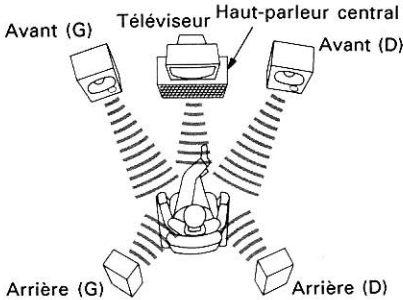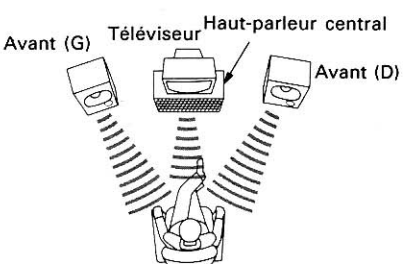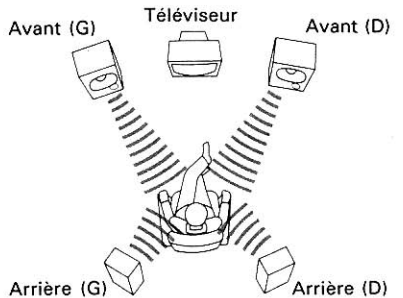Mode central	Mode Surround	DOLBY PRO LOGIC	DOLBY 3 STEREO
<b>NORMAL</b> Sélectionner ce mode si vous utilisez un petit haut-parleur central. Le son grave du canal central est sorti par les haut-parleurs avant (G et D), car un petit haut-parleur ne peut pas reproduire assez bien les graves.			
<b>WIDE</b> Sélectionner ce mode si vous utilisez un haut-parleur central moyen ou grand.			
<b>PHANTOM</b> Sélectionner ce mode quand le haut-parleur central n'est pas utilisé. Le son du canal central est sorti par les haut-parleurs avant (G et D).			<p>Pas prévu</p>

### Mode HALL

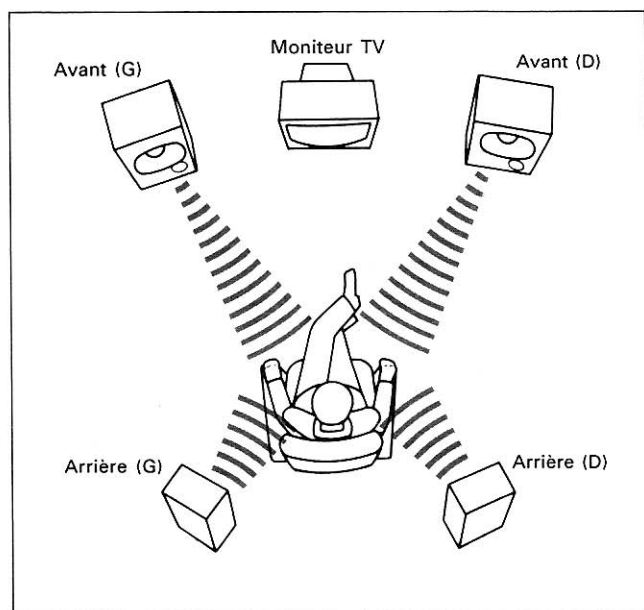

## Durée de retard

Dans les modes Surround, le son des haut-parleurs arrières doit être légèrement retardé par rapport à celui des haut-parleurs avant. La durée de retard optimale sera différente dans des pièces de tailles différentes et dépendra des propriétés acoustiques, comme les murs et le mobilier reflètent ou absorbent le son, etc. Il est recommandé d'essayer plusieurs durées de retard pour obtenir le meilleur effet. Le retard est à synthèse numérique, pour la plus haute qualité sonore avec du bruit et des distorsions minimum.


La durée de retard peut être réglée de façon indépendante pour chaque mode Surround en utilisant la touche DELAY TIME (⌚), avec le réglage courant montré dans l'affichage.

### Réglage de durée de retard

Mode Surround	Gamme de réglage (par paliers de 5 ms)
DOLBY PRO LOGIC	15 à 30 ms
HALL	5 à 30 ms

## Lecture de son Surround

### Surround DOLBY PRO LOGIC

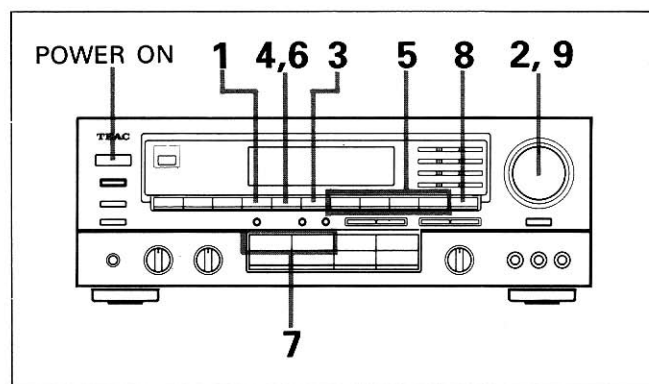

#### Equilibre relatif des volumes entre haut-parleurs

1. Appuyer sur la touche DOLBY PRO LOGIC.
2. Régler la commande MASTER VOLUME sur le niveau d'écoute normal.
3. Appuyer sur la touche CENTER MODE pour sélectionner le mode de haut-parleur central que vous voulez, le mode NORMAL, WIDE ou PHANTOM.

4. Appuyer sur la touche TEST TONE pour envoyer un signal de tonalité test à chaque haut-parleur en séquence comme montré ci-dessous.

GAUCHE → CENTRE → DROIT → ARRIERE

**Remarque:** Si le mode PHANTOM est sélectionné dans l'étape 3, le son du signal du haut-parleur central est sorti sur les deux haut-parleurs avant (G et D).

5. Ajuster les commandes CENTER LEVEL et REAR LEVEL pour que les volumes de tonalité test soient égaux sur tous les haut-parleurs.
6. Appuyer sur la touche TEST TONE pour arrêter le test.

### Ajustement de la durée de retard

7. Lire un programme vidéo avec la marque DOLBY SURROUND.
8. Ajuster la durée de retard comme voulue en 4 paliers en appuyant sur la touche DELAY TIME:


→ 15ms → 20ms → 25ms → 30ms →

20 ms est la valeur standard.

### Lecture de son Surround

9. Ajuster la commande MASTER VOLUME pour le volume général le plus convenable.

### Surround DOLBY 3 STEREO

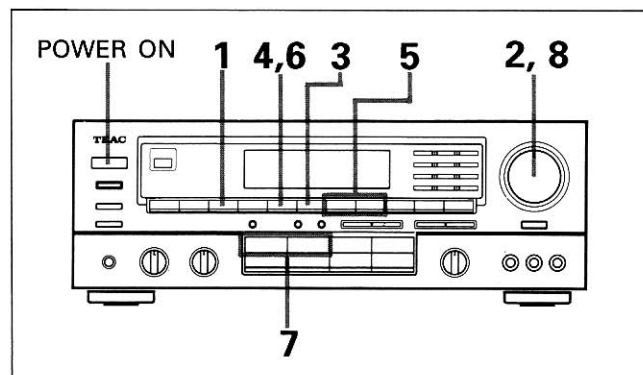

#### Equilibre relatif des volumes entre haut-parleurs


1. Appuyer sur la touche DOLBY 3 STEREO.
2. Régler la commande MASTER VOLUME sur le niveau d'écoute normal.
3. Appuyer sur la touche CENTER MODE pour sélectionner le mode de haut-parleur central que vous voulez, le mode NORMAL ou WIDE.

- Appuyer sur la touche TEST TONE pour envoyer un signal de tonalité test à chaque haut-parleur en séquence comme montré ci-dessous.  
GAUCHE → CENTRE → DROIT
- Ajuster les commandes CENTER LEVEL pour que le volume du son du haut-parleur central soit égal à celui du haut-parleur gauche et puis à celui du haut-parleur droit.
- Appuyer sur la touche TEST TONE pour arrêter le test.

## **Lecture de son Surround**

- Lire un programme vidéo avec la marque DOLBY SURROUND.
- Ajuster la commande MASTER VOLUME pour le volume général le plus convenable.

## **Surround HALL**

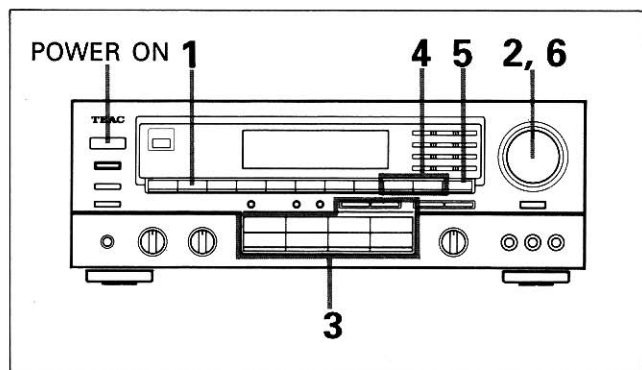

## **Equilibre relatif des volumes entre haut-parleurs**

- Appuyer sur la touche HALL.
- Régler la commande MASTER VOLUME sur le niveau d'écoute normal.
- Faire la lecture sur l'appareil source.
- Ajuster le volume des haut-parleurs arrières par rapport à celui des haut-parleurs avant comme voulu.

## **Ajustement de la durée de retard**

- Ajuster la durée de retard comme voulue en 6 paliers en appuyant sur la touche DELAY TIME:  
→ 5ms → 10ms → 15ms → 20ms → 25ms → 30ms

## **Lecture de son Surround**

- Ajuster la commande MASTER VOLUME pour le volume général le plus convenable.


Tant que le cordon secteur est branché à une prise de courant, les items suivants réglés avant la coupure de l'alimentation de l'appareil sont maintenus indéfiniment.

Ces items sont également maintenus pendant environ une semaine si le cordon d'alimentation est débranché de la prise de courant.

- Touche de source (comprenant les touches TAPE 2 MONITOR, AM et FM) sélectionnée en dernier
- Fréquence de réception  
Gamme de réception  
Mémoires de station pré réglée  
Réglage de la touche FM MODE  
Réglage de la touche AUTO/MANU TUNING
- Mode Surround  
Mode haut-parleur central  
Niveau du haut-parleur central  
Niveau des haut-parleurs arrières  
Durée de retard

# FONCTIONNEMENT TELECOMMANDE D'UNE CHAÎNE TEAC

**En utilisant un lecteur CD ou une platine à cassette avec une fenêtre REMOTE SENSOR**

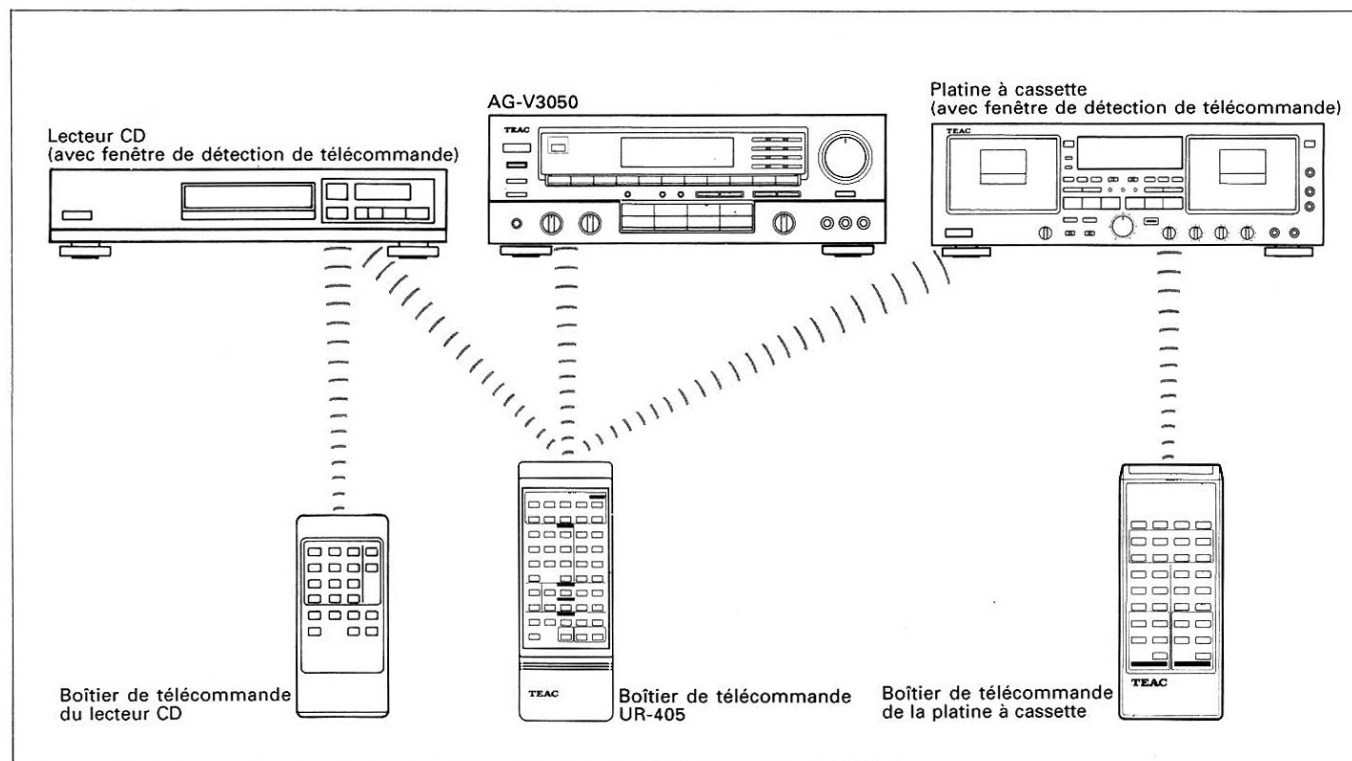


Comme montré, si d'autres appareils TEAC ont des fenêtres REMOTE SENSOR, le boîtier de télécommande UR-405 fourni peut télécommander directement le fonctionnement de ces autres appareils, en plus de la télécommande du récepteur AG-V3050. Si les autres appareils nécessitent des opérations au delà de celles de base offertes par l'UR-405, utiliser les boîtiers de télécommande fournis avec les appareils.

## Remarque:

Les lecteurs CD suivants ne peuvent pas être directement commandés en utilisant la télécommande UR-405. Pour les commander en utilisant l'UR-405, raccorder l'AG-V3050 aux lecteurs CD en utilisant le câble de télécommande (en option), puis utiliser l'UR-405 en la dirigeant vers l'AG-V3050.


## Modèles concernés:

CD-P250, CD-P280, ED-570, PD-435, PD-485, PD-495 et PD-555.

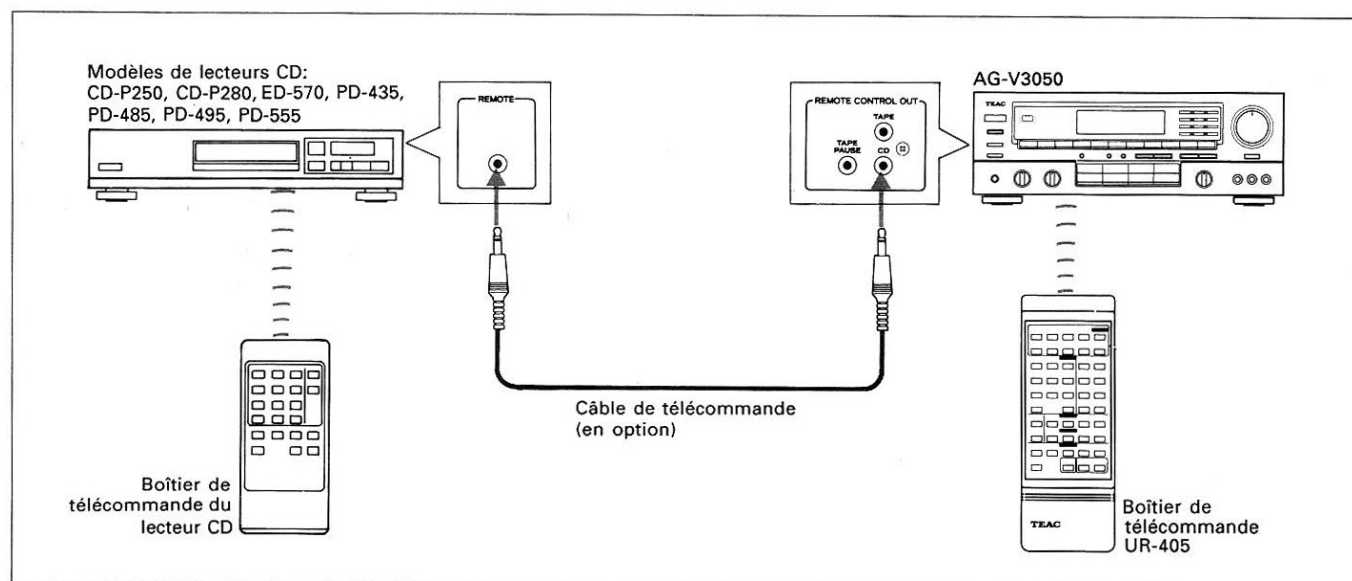




## En utilisant une platine à cassette sans fenêtre REMOTE SENSOR

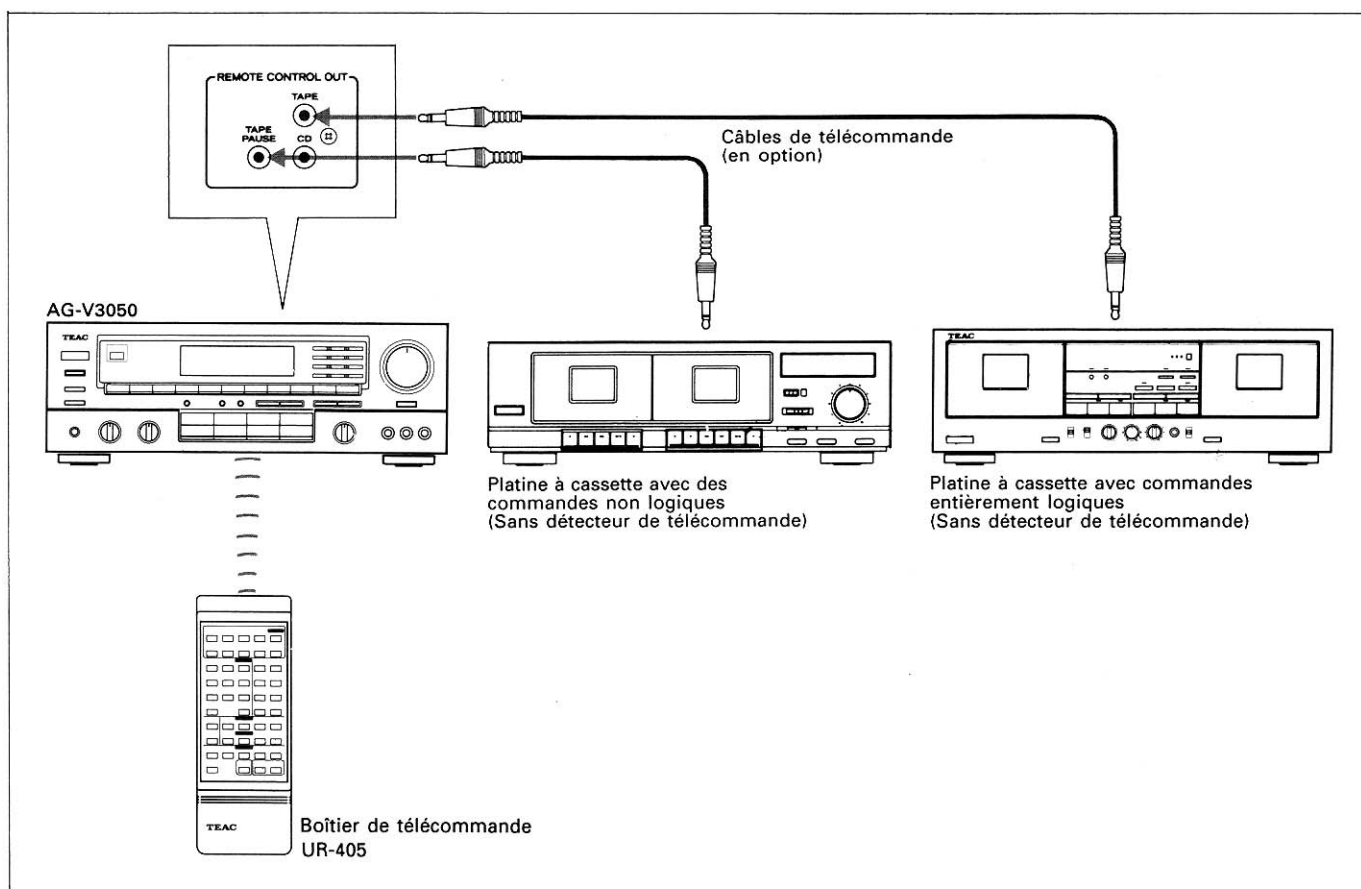

L'illustration montre une chaîne utilisant des platines à cassette UR (à télécommande unifiée) sans fenêtre REMOTE SENSOR. Lorsqu'une platine à commandes entièrement logiques est raccordée au récepteur AG-V3050 en utilisant un câble de télécommande (disponible en option), ses opérations de base sont télécommandées en utilisant le boîtier de télécommande UR-405. Lorsqu'une platine avec des commandes non logiques est raccordée, seul le mode de pause peut être télécommandé.

## Touches pour le fonctionnement d'autres appareils TEAC

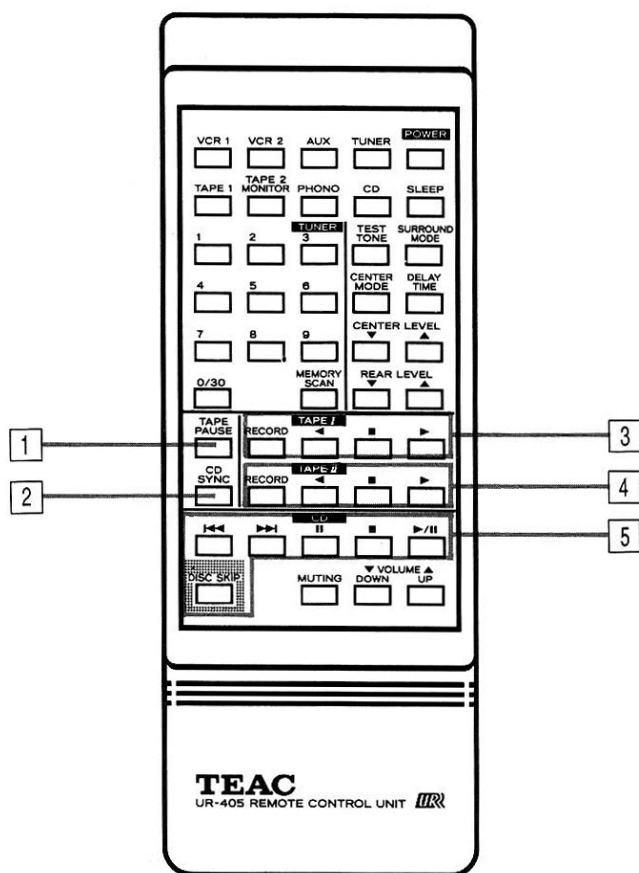

Boîtier de télécommande (UR-405)

### Remarque:

Ne pas confondre "TAPE I" comme décrit dans cette section et "TAPE 1" qui signifie la platine à cassette raccordée aux bornes TAPE 1.

La même chose s'applique également à "TAPE II" et "TAPE 2".

#### 1 Touche TAPE PAUSE

Peut seulement être utilisée avec des platines à cassette avec des commandes non logiques. Appuyer une fois pour régler la platine à cassette en mode de pause; appuyer à nouveau pour repartir.

#### 2 Touche CD SYNC

Lorsque l'AG-V3050 est utilisé dans une chaîne avec un lecteur CD TEAC et une platine à cassette TEAC (avec des commandes entièrement logiques), il est possible de synchroniser les opérations du lecteur CD et de la platine à cassette, ainsi ils peuvent être lancés exactement en même temps, pour copier un disque audionumérique sur une cassette.

Dans cette configuration, la borne CD/DECK SYNC du lecteur CD et la borne CD/DECK SYNC de la platine à cassette doivent être raccordées en utilisant le câble synchro WR-7000 en option (bien noter que c'est différent du câble de télécommande en option).

Le fonctionnement synchronisé du lecteur CD et de la platine à cassette peut être lancé en appuyant soit sur la touche CD SYNC du boîtier de télécommande ou de la platine à cassette.

#### 3 Touches TAPE I

Le mécanisme TAPE I d'une platine à cassette à double transport avec commandes entièrement logiques peut être commandé en utilisant ces touches.

##### Remarques:

- Pour lancer l'enregistrement, appuyer simplement sur la touche RECORD; elle n'a pas besoin d'être pressée avec la touche PLAY.
- Si le mécanisme TAPE I d'une platine à cassette à double transport n'a pas de fonction d'enregistrement, la touche TAPE I RECORD n'a pas d'effet.

#### 4 Touches TAPE II

Le mécanisme TAPE II d'une platine à cassette à double transport avec commandes entièrement logiques peut être commandé en utilisant ces touches. Elles sont également utilisées pour commander une platine à cassette à transport simple avec commandes entièrement logiques.

##### Remarque:

- Pour lancer l'enregistrement, appuyer simplement sur la touche RECORD; elle n'a pas besoin d'être pressée avec la touche PLAY.

#### 5 Touches CD

- **Touches SKIP (◀◀, ▶▶):** A chaque pression sur ces touches, le capteur se déplace au début du morceau suivant dans le sens avant ou inverse. Maintenues pressées, le saut continue jusqu'au relâchement de la touche.
- **Touches PAUSE (||), PLAY/PAUSE (▶/||):** Pour arrêter momentanément la lecture CD, appuyer sur la touche PAUSE si le lecteur CD a une touche PAUSE indépendante, appuyer sur la touche PLAY/PAUSE s'il a une touche PLAY/PAUSE.
- **Touche STOP (■):** Appuyer pour arrêter le lecteur CD.
- **Touche DISC SKIP:** Sélectionne le disque suivant dans un changeur automatique.

# EN CAS DE DIFFICULTES

Pour déterminer tout problème avec votre récepteur, toujours vérifier les causes les plus probables en premier. Si le problème persiste même après avoir vérifié les items suivants, consulter votre revendeur TEAC le plus proche.

Problème	Cause probable	Remède
<b>Alimentation</b>		
Pas d'alimentation	Le cordon d'alimentation n'est pas branché.	Brancher correctement le cordon d'alimentation.
<b>Amplificateur</b>		
Le son ne peut pas être entendu.	La touche de sélection de haut-parleur (SPEAKERS) requise n'est pas sur ON.	Régler la touche de sélection de haut-parleur requise sur ON.
	La touche de silencieux (MUTING) est réglée sur ON.	Bien régler la commande MASTER VOLUME sur le minimum puis régler la touche de silencieux sur OFF.
	La touche TAPE 2 MONITOR est sur ON.	Régler la touche TAPE 2 MONITOR sur OFF.
Le son est entendu de seulement un canal.	La commande BALANCE est réglée sur une extrémité.	Régler la commande de balance.
	Un des cordons d'entrée est débranché.	Brancher correctement les cordons d'entrée.
Les fréquences graves sont insuffisantes et l'image des fréquences médiums n'est pas fixe.	Les raccordements plus et moins d'un des haut-parleurs sont inversés.	Raccorder les haut-parleurs avec la bonne polarité.
Bourdonnement ou bruit.	La platine tourne-disque n'est pas mise à la masse.	Raccorder le fil de masse à la borne GND sur le panneau arrière.
	Les cordons de signal de la platine tourne-disque ne sont pas raccordés fermement aux bornes PHONO.	Raccorder fermement les cordons aux bornes PHONO.
	Le matériel audio est trop près du téléviseur.	Eloigner le téléviseur du matériel audio.
<b>Syntoniseur</b>		
Pas de syntonisation.	L'antenne n'est pas raccordée.	Raccorder l'antenne.
La syntonisation automatique n'est pas possible.	Le signal des stations est trop faible.	Effectuer la syntonisation manuelle.
		Utiliser une meilleure antenne extérieure et régler son orientation.
L'indicateur STEREO ne s'allume pas avec des émissions stéréo.	La touche FM MODE est réglée sur le mode Mono.	Régler la touche FM MODE sur le mode Stéréo.
Interférence électromagnétique	Parasites d'allumage des automobiles.	Utiliser une antenne extérieure et l'installer loin de la route.
	Le téléviseur est trop près du récepteur.	Eloigner le récepteur du téléviseur.

Problème	Cause probable	Remède
<b>Effets Surround</b>		
Pas de son des haut-parleurs arrières.	Le sélecteur SURROUND MODE est réglé sur BYPASS.	Régler le sélecteur sur la position du mode Surround voulu.
	Si le réglage de MASTER VOLUME est à bas niveau, le volume des haut-parleurs arrières devient encore plus faible.	Augmenter le niveau du volume des haut-parleurs arrières en utilisant la commande REAR LEVEL.
Pas de son du haut-parleur central.	Le sélecteur SURROUND MODE n'est pas réglé sur DOLBY PRO LOGIC ni sur DOLBY 3 STEREO.	Régler le sélecteur sur DOLBY PRO LOGIC ou DOLBY 3 STEREO.
	Si le réglage de MASTER VOLUME est à bas niveau, le volume du haut-parleur central devient encore plus faible.	Augmenter le niveau du volume du haut-parleur central en utilisant la commande CENTER LEVEL.
	Le sélecteur CENTER MODE est réglé sur PHANTOM.	Régler le sélecteur sur NORMAL ou WIDE.
<b>Télécommande</b>		
La télécommande est impossible.	Les piles sont usées.	Les remplacer par des neuves.
	Le boîtier de télécommande est trop loin du récepteur ou en dehors de la gamme utilisable.	Faire fonctionner le boîtier de télécommande dans la gamme utilisable.
	Il y a un obstacle entre le détecteur de télécommande du récepteur et le boîtier de télécommande.	Retirer l'obstacle.

#### Attention:

Comme le récepteur incorpore un microprocesseur, il peut ne pas fonctionner correctement à cause de parasites externes, etc. Dans un tel cas, débrancher le cordon secteur de la prise de courant, et attendre environ dix secondes avant de le remettre en marche pour reprendre les opérations.

# CARACTERISTIQUES TECHNIQUES

## Section Amplificateur

### Puissance de sortie (Avant):

#### Règle F.T.C.:

100 watts RMS par canal minimum, les deux canaux pilotés sous 8 ohms de 20 Hz à 20 kHz avec pas plus de 0,07% de distorsion harmonique totale (Etats-Unis/Canada)

#### Puissance RMS (20 Hz à 20 kHz):

95 watts/8 ohms, 0,07% (Europe)

105 watts/8 ohms, 0,07% (Exportation générale)

**Puissance DIN:** 115 watts/8 ohms (Europe)

### Puissance de sortie Surround (0,7% THD, 1 kHz):

3 × 65 watts (Avant, Centre)

1 × 35 watts (Arrière)

### Distorsion harmonique totale (Avant):

0,01% (à 100 watts, 1 kHz)

### Distorsion d'intermodulation (Avant):

0,02% (à 100 watts)

### Durée de retard:

DOLBY PRO LOGIC: 15 à 30 ms (pas de 5 ms)

HALL: 5 à 30 ms (pas de 5 ms)

### Sensibilité/impédance d'entrée:

PHONO: 2,5 mV/47 kohms

LINE\*: 150 mV/47 kohms

### Réponse en fréquence:

PHONO: 30 Hz à 20 kHz,  $\pm 1$  dB

LINE\*: 10 Hz à 60 kHz,  $- 3$  dB

### Rapport signal/bruit:

PHONO: 70 dB

LINE\*: 76 dB

### Commande de tonalité:

Grave:  $\pm 10$  dB à 100 Hz

Aigu:  $\pm 10$  dB à 10 kHz

## Section Tuner FM

### Gamme de syntonisation:

87,5 MHz à 108,0 MHz (pas de 100 kHz)

(Etats-Unis/Canada)

87,5 MHz à 108,0 MHz (pas de 50 kHz)

(Europe/Exportation générale)

### Sensibilité utilisable (IHF):

Mono: 13,2 dBf

(Etats-Unis/Canada/Exportation générale)

Mono: 16,2 dBf (Europe)

### Seuil de sensibilité 50 dB:

Mono: 18 dBf

(Etats-Unis/Canada/Exportation générale)

Mono: 20 dBf (Europe)

Stereo: 38 dBf

(Etats-Unis/Canada/Exportation générale)

Stereo: 42 dBf (Europe)

### Rapport de capture:

1,5 dB (Etats-Unis/Canada)

2,5 dB (Europe/Exportation générale)

### Taux de réjection image:

40 dB (Etats-Unis/Canada/Exportation générale)

80 dB (Europe)

### Suppression AM: 60 dB

### Intermodulation RF: 65 dB

### Distorsion harmonique totale (1 kHz):

Mono: 0,2%

Stereo: 0,4%

### Réponse en fréquence: 30 Hz à 15 kHz, $\pm 1$ dB

### Séparation stéréo (1 kHz): 45 dB

### Rapport signal/bruit:

Mono: 73 dB

Stereo: 70 dB

## Section Tuner AM

### Gamme de syntonisation:

530 kHz à 1.710 kHz (pas de 10kHz)

(Etats - Unis / Canada / Exportation générale)

522 kHz à 1.611 kHz (pas de 9 kHz)

(Europe)

### Sensibilité utilisable: 50 dB/m

### Distorsion harmonique totale: 0,5% à 85 dB/m

### Rapport signal/bruit: 48 dB à 85 dB/m

## Section Vidéo

### Sensibilité/impédance d'entrée: 1,0 Vcc/75 ohms

### Niveau/impédance de sortie: 1,0 Vcc/75 ohms

### Réponse en fréquence: 5 Hz à 6 MHz, $- 3$ dB

### Rapport signal/bruit: 60 dB (1 kHz, HPF IN)

## Générales

### Alimentation:

120 V CA, 60 Hz (Etats-Unis/Canada)

230 V CA, 50 Hz (Europe)

115/230 V CA, 50-60 Hz (Exportation générale)

### Consommation:

2,9 A (Etats-Unis/Canada)

670 W (Europe/Exportation générale)

### Prise CA:

Commutée  $\times 2$ , Total 100 W max. (1 A max.)

(Etats-Unis/Canada)

Commutée  $\times 1$ , 100 W max.

(Europe/Exportation générale)

### Dimensions (L x H x P):

435  $\times$  156  $\times$  380 mm

### Poids (net): 12 kg

### Accessoires standard:

Antenne cadre AM  $\times 1$

Antenne FM en "T"  $\times 1$

Boîtier de télécommande (UR-405)  $\times 1$

Pile ("AA", "R6", SUM-3)  $\times 2$

Transformateur d'adaptation (pour conversion 300 ohms en 75 ohms)  $\times 1$  (Europe)

Adaptateur de fiche CA  $\times 1$  (Exportation générale)

\* LINE signifie CD, VCR 1, VCR 2, AUX, TAPE 1 et TAPE 2.

• Des améliorations peuvent apporter des changements dans les caractéristiques techniques et générales sans préavis.

• Les photos et illustrations peuvent légèrement différer des modèles produits.